


# OMRON

This manual not printed

## Portable Multi Logger ZR-RX70

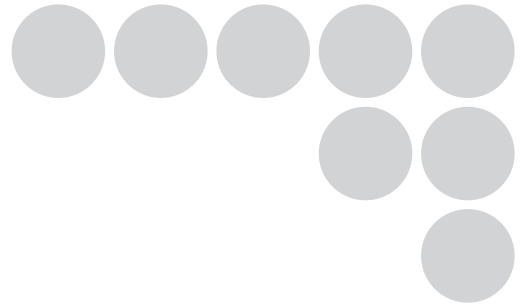

## User's Manual



## Introduction

This manual provides information regarding functions, performance and operating methods that are required for using the ZR-RX70.

When using the ZR-RX70, be sure to observe the following:

- The ZR-RX70 must be operated by personnel knowledgeable in electrical engineering.
- To ensure correct use, please read this manual thoroughly to deepen your understanding of the product.
- Please keep this manual in a safe place so that it can be referred to whenever necessary.

## Registered Trademarks


- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corp. in the United States and/or other countries.
- Other product and company names herein may be either registered trademarks or trademarks of their respective owners.

## Type of Manuals

The manuals of the ZR-RX70 series consist of the following.

Select the manual suitable for your purpose and read it before starting operation.

### Manual packaged in the product (brochure)

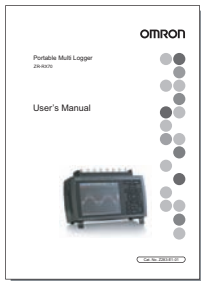

### User's Manual (this manual)

- Information for safe and correct use
- Before use: connection and wiring in details, language change of display, etc.
- Procedure in details for setting and measurement
- Specifications of the ZR-RX70 series and accessories
- Other information which is required for the use of the ZR-RX70 series

### Manuals contained in the utility CD-ROM (pdf data)



### Software Manual

Information for installing PC software, basic operation, explanation of screen and setting methods is described.

Two PC software manuals are contained.

- Special PC software "Wave Inspire RX"
- Basic PC software "Smart Viewer RX70"

### User's Manual (this manual)

Same contents as the above referenced "User's Manual" packaged in the product.

# User's Manual

APPLICATION CONSIDERATIONS  
(Please Read)

---

GENERAL DESCRIPTION

---

**1**

CHECKS AND PREPARATION

---

**2**

SETTINGS AND MEASUREMENT

---

**3**

SPECIFICATIONS

---

**4**

APPENDIX

---

**5**

# Terms and Conditions Agreement

## Warranty, Limitations of Liability

### Warranties

#### Exclusive Warranty

Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

#### Limitations

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right.

#### Buyer Remedy

Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <http://www.omron.com/global/> or contact your Omron representative for published information.

### Limitation on Liability; Etc

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.



# Application Considerations

## Suitability of Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## Programmable Products

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## Disclaimers

### Performance Data

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

### Errors and Omissions

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

## Meanings of Signal Words

The following signal words are used in this manual.



Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage.

## Meanings of Alert Symbols

The following alert symbols are used in this manual.



Indicates the possibility of explosion under specific conditions.



Indicates the possibility of electric shock under specific conditions.



Indicates prohibition when there is a risk of minor injury from electrical shock or other source if the product is disassembled.



Indicates general prohibitions for which there is no specific symbol.

## Alert Statements in this Manual

The following alert statements apply to the products in this manual. Each alert statement also appears at the locations needed in this manual to attract your attention.

### WARNING

This product cannot be used for directly or indirectly detecting human bodies to ensure safety.



Do not use this product as a human body protection device.

Serious hazard may occur in rare occasions due to ignition, rupture or combustion of the lithium battery contained in this product.



Never disassemble, deform under pressure, heat or incinerate this product.

Serious hazard may occur in rare occasions due to ignition, rupture or combustion.



Never disassemble, deform under pressure, heat or incinerate the lithium ion battery pack ZR-XRB1 (GRAPHTEC:B-517).

### CAUTION

Hazard may occur from serious fire or electric shock.



Do not connect voltages exceeding the rated voltage to the signal input terminals.

Fire or hazard may occur in rare occasions from ignition, rupture or combustion.



Do not use battery packs other than ZR-XRB1.

Hazard may occur from electric shock.



Do not remove the protection cap for unused BNC terminal. Be sure to leave the cap (supplied) attached to this terminal.

Hazard may occur from electric shock.



Be sure to connect the terminal of this product to the cable first, and connect the measurement object.

Injuries from electric shock may occur in rare occasions as the result of disassembly.



Never disassemble, deform under pressure or incinerate the main unit.

## Precautions for Safe Use

Be sure to observe the following items as they are very important to ensure safety.

### 1. Installation environment

- Do not store or use in locations where the temperature exceeds the rated range.
- Do not use in locations where the relative humidity exceeds the 30 to 80 %RH range.
- Do not use in locations subject to steam.
- Do not use in flammable or explodable gas environment.

### 2. Installation category

- The ZR-RX70 conforms to the IEC60664-1 installation category II, and must not be used under the environment of the installation category III and IV.

### 3. Measurement category

- The ZR-RX70 is classified as measurement category I defined by IEC61010-1, and must not be used within measurement category II, III and IV.

### 4. Power supply and wiring

- Do not connect voltages exceeding the rated voltage to signal cables.
- Be sure to check the polarity of the signals when connecting the signal cables.
- When using the battery pack, be sure to read the cautions on the battery pack carefully for correct usage.
- Be sure to use only the specified battery pack.
- Be sure to use only the AC cable and the AC adapter provided as standard accessories.
- Do not connect power supplies exceeding the rated voltage to the AC adapter.
- Be sure to turn off the power supply when connecting to the input terminals.
- Do not touch the input terminals during measurement.
- Do not input signals to the M3 screw type terminal and the BNC connector of the same channel at the same time.

### 5. Others

- Dispose of this product as industrial waste.
- If there are any troubles, stop usage immediately, turn off the power supply and contact OMRON branch or sales office.

## Precautions for Correct Use

Please observe the following precautions to prevent inoperability, misoperation of the product or negative effects on the performance and the device.

### 1. Installation Location

Do not install this product in the following locations.

- Locations where the temperature exceeds the rated range
- Locations where severe changes in temperature occur (where condensation occurs)
- Locations subject to corrosive or flammable gases
- Locations subject to dust, salt or iron powder
- Locations subject to direct shock or vibration
- Locations subject to direct sunlight or near heating devices
- Locations where water, oil or chemical products may be splashed
- Locations subject to strong magnetic fields or strong electric fields

### 2. Power supply, connecting and wiring

- The cables should be wired apart from high-tension or power lines.  
Malfunction or damage may occur due to induction.
- After wiring, check the adequacy of power supply voltage, miswiring such as overvoltage/load short-circuiting and adequacy of load current before turning on the power supply.  
Malfunction may occur due to miswiring and such.
- Always turn off the power supply when attaching or removing peripheral devices.  
Attaching or removing of peripheral devices with the power supply on can cause malfunction or data corruption.

### 3. Installation

- Do not cover the vent hole when using this product.  
Leave at least 30cm of installation space around this product.  
The generated heat may cause malfunction or damage.
- When measuring temperature, install the product so that the input terminals are not subject to severe changes in temperature by wind or sunlight.  
It may cause calculation errors.
- Connect the GND terminal for safe measurement. This product must also be grounded when sharing a common ground level with other devices.

### 4. Warm up

- For stable measurement, wait at least 30 minutes after turning on the power supply before using.

### 5. Handling

- Be sure to take backups of captured data in your PC. The captured content may be altered or lost due to misuse or malfunctions during usage.
- Do not drop or apply strong impact or force to the product.  
It may cause malfunction of the monitor or the main unit.

### 6. Maintenance

- Do not use thinner, benzene, acetone or kerosene to clean this product.
- Calibration should be performed periodically to maintain measurement accuracy.

## Checking the Accessories

Item	Remarks	Quantity
Standard Set ZR-RX70A	Main unit	1
	AC adapter/AC cable	1
	User's Manual (this manual)	1
	Utility disk (CD-ROM)	1
	• Special PC software "Wave Inspire RX" (tryout)	
	• Basic PC software "Smart Viewer RX70"	
	• User's Manual PDF files (this manual)	
• "Wave Inspire RX" Software Manual PDF files		
• "Smart Viewer RX70" Software Manual PDF files		

## Editor's Note

### ■ Meaning of Symbols

Menu items that are displayed on the ZR-RX70's LCD screen, and windows, dialog boxes and other GUI elements displayed on the PC are indicated enclosed by double quotes “ ”.

### ■ Visual Aids

#### Important

Indicates points that are important to achieve the full product performance, such as operational precautions.

#### Note

Indicates application procedures.



Indicates pages where related information can be found.

MEMO



# CONTENTS

## 1. GENERAL DESCRIPTION

<b>Overview</b> .....	<b>16</b>
<b>Features</b> .....	<b>17</b>
<b>Operating Environment</b> .....	<b>18</b>

## 2. CHECKS AND PREPARATION

<b>Part Names and Functions</b> .....	<b>20</b>
<b>Connecting the Power Cable and Turning on the Power</b> .....	<b>21</b>
Connecting to an AC Power Supply .....	21
Connecting to a DC Power Supply .....	23
<b>Connecting the Analog Input Terminal</b> .....	<b>24</b>
Terminal Configuration and Signal Types .....	24
Connection Diagram .....	25
<b>Logic Alarm Cable Connection and Functions</b> .....	<b>26</b>
<b>Attaching USB Memory</b> .....	<b>29</b>
Inserting a USB Memory .....	29
<b>Connecting to a PC</b> .....	<b>30</b>
Connection Using a USB Cable .....	30
LAN Connection .....	31
<b>Using the Battery Pack (ZR-XRB1: Option)</b> .....	<b>32</b>
Mounting the Battery Pack .....	32
Charging the Battery .....	33
<b>Connecting the Humidity Sensor (Option)</b> .....	<b>34</b>
<b>Precautions to Observe When Performing Measurement</b> .....	<b>35</b>
<b>Noise Countermeasures</b> .....	<b>36</b>
<b>Setting the Date and Time</b> .....	<b>37</b>
How to Recharge the Rechargeable Battery .....	37
How to Set the Date and Time .....	37
<b>Changing the Display Language</b> .....	<b>38</b>

# 3.SETTINGS AND MEASUREMENT

<b>Window names and functions</b> .....	<b>40</b>
<b>Key Operation</b> .....	<b>44</b>
(1) CH SELECT .....	44
(2) SPAN/TRACE/POSITION .....	45
(3) TIME/DIV .....	46
(4) MENU .....	46
(5) QUIT .....	47
(6) Direction keys .....	47
(7) ENTER .....	48
(8) FAST FORWARD keys (KEY LOCK) .....	48
(9) START/STOP (USB Drive Mode) .....	48
(10) REVIEW .....	49
(11) DISPLAY .....	50
(12) CURSOR (ALARM CLEAR) .....	51
(13) FILE .....	52
(14) NAVI .....	52
<b>Operation Modes</b> .....	<b>54</b>
(1) Free Running .....	54
(2) Capturing .....	55
(3) Capturing and Replaying .....	55
(4) Replaying .....	56
<b>Setting Menus</b> .....	<b>57</b>
(1) AMP Settings .....	57
(2) DATA Settings .....	63
(3) TRIG Settings .....	69
(4) OPT Settings .....	75
(5) OTHR Settings .....	77
(6) FILE Menu .....	80
(7) File Box .....	85
(8) Text Input .....	88
(9) Data Replay Menu .....	89
(10) NAVI Menu .....	93
(11) Quick Settings .....	93
(12) Canceling Key Lock with Password .....	94
<b>X-Y Measurement Example</b> .....	<b>95</b>
Example 1: Measure the CH1 for X-axis and the CH2 for Y-axis. ....	95
Example 2: Overlay the data on the previously captured data to compare their waveforms..	98
<b>WEB Server Function</b> .....	<b>100</b>

# 4.SPECIFICATIONS

<b>Standard Specifications</b> .....	<b>108</b>
Standard Specifications .....	108
Analog Input Measurement Accuracy .....	110
Main Functions .....	111
<b>Accessory/Option Specifications</b> .....	<b>113</b>
PC Software .....	113
Battery Pack .....	114
Humidity Sensor .....	114
<b>External Dimensions</b> .....	<b>115</b>

# 5.APPENDIX

<b>Error Messages and Countermeasures</b> .....	<b>118</b>
List of Error Messages .....	118
List of File Error Messages .....	119
<b>Index</b> .....	<b>121</b>
<b>Revision History</b> .....	<b>124</b>



# GENERAL DESCRIPTION

---

This chapter provides a general description of the ZR-RX70 and its features.

<b>Overview</b>	<b>16</b>
<b>Features</b>	<b>17</b>
<b>Operating Environment</b>	<b>18</b>

# Overview

The ZR-RX70 (with color monitor and internal memory) are compact, lightweight, 8 channel data loggers.

ZR-RX70 are also equipped with an internal flash memory to store data and enable the direct capture of a large volume of data to USB memory.

Furthermore, the data loggers are equipped with USB and Ethernet interfaces to a PC to enable system configurations according to your application.

The Ethernet feature includes WEB and FTP server and NTP client functions which allow monitoring from a remote location, data transfer, and automatic time synchronization.

# Features

## Input

- The input terminals come in two types: easy-to-connect BNC connectors and M3 screw type terminals, which facilitate wiring of thermocouples.
- All channels are isolated, enabling measurement of signals of different references.

## Display & Operation

- With the ZR-RX70's 5.7-inch TFT color liquid crystal display, you can confirm the waveforms of measured data and each channel's settings at a glance.
- Easy operation is achieved through a straightforward menu structure and key allocation which resembles mobile phones.
- The relationships between timers and triggers are displayed graphically in an easy-to-understand manner.

## Data Capture


- Data can be saved to the internal flash memory or external USB memory. The saved data will be retained even after the power is turned off.
- The internal flash memory can be used with disk images thus multiple data items can be maintained.
- Setting the data capture destination to the internal RAM enables quick capture of data. After checking the captured data, you can save it to the internal flash memory or USB memory if required.


## Data Control & Processing

- The PC software provided lets you set conditions and monitor data on a PC.
- The USB drive mode function enables the ZR-RX70's internal flash memory to be recognized as an external drive by your PC. (Connect the ZR-RX70 to your PC and turn on the power supply to the ZR-RX70 while holding down the [START] key.)
- Captured data can be read from the PC software to files and displayed for processing.
- Data can be transferred off-line to a computer using USB memory.
- The WEB server function enables control and monitoring from a remote location without using dedicated software.
- The FTP server function enables handling internal memory and USB memory data from a PC.
- The NTP client function enables adjusting the time according to the NTP server.

# Operating Environment

This section explains the operating environment for the ZR-RX70.

 See "Precautions for Safe Use" p. 6

 See "Precautions for Correct Use" p. 7

## Note


Condensation occurs in the form of water droplets on the device surfaces and interior when the ZR-RX70 is moved from a cold to a warm location. Using the ZR-RX70 with condensation will cause malfunctioning. Wait until the condensation has disappeared before turning on the power.

## Warming-up Before Use


The ZR-RX70 should be allowed to warm up with the power turned on for approximately 30 minutes to ensure that it operates according to the specified performance.

## Configuration When in Use


Use the ZR-RX70 standing upright or at an angle, being set on the stand.

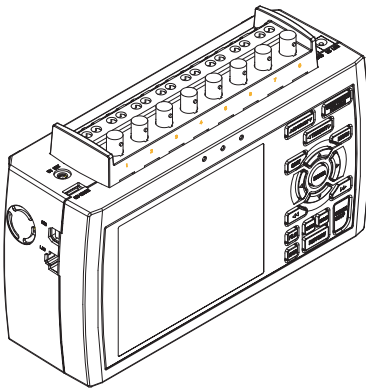

Standing upright

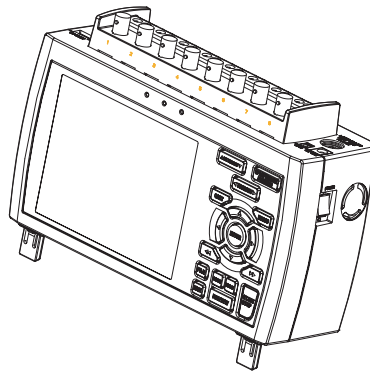

Standing at an angle, being set on the stands

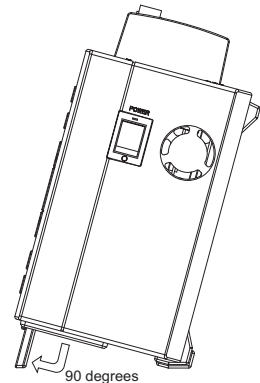

How to open the stands

## Important

Do not block the air vent on the ZR-RX70, as this will cause malfunctioning. Measurement accuracy may not be satisfactory if the system is used in a condition other than described above.

Use both the stands of the ZR-RX70 when you use it at an angle. Otherwise, the unit will fall down. Open both the stands before use as shown in this figure.




# CHECKS AND PREPARATION

This chapter explains how to check the ZR-RX70's external casing and accessories, and how to prepare the ZR-RX70 for operation.

<b>Part Names and Functions</b>	<b>20</b>
<b>Connecting the Power Cable and Turning on the Power</b>	<b>21</b>
<b>Connecting the Analog Input Terminal</b>	<b>24</b>
<b>Logic Alarm Cable Connection and Functions</b>	<b>26</b>
<b>Attaching USB Memory</b>	<b>29</b>
<b>Connecting to a PC</b>	<b>30</b>
<b>Using the Battery Pack (ZR-XRB1: Option)</b>	<b>32</b>
<b>Connecting the Humidity Sensor (Option)</b>	<b>34</b>
<b>Precautions to Observe When Performing Measurement</b>	<b>35</b>
<b>Noise Countermeasures</b>	<b>36</b>
<b>Setting the Date and Time</b>	<b>37</b>
<b>Changing the Display Language</b>	<b>38</b>

# Part Names and Functions

This section describes the names and function of parts of the ZR-RX70.

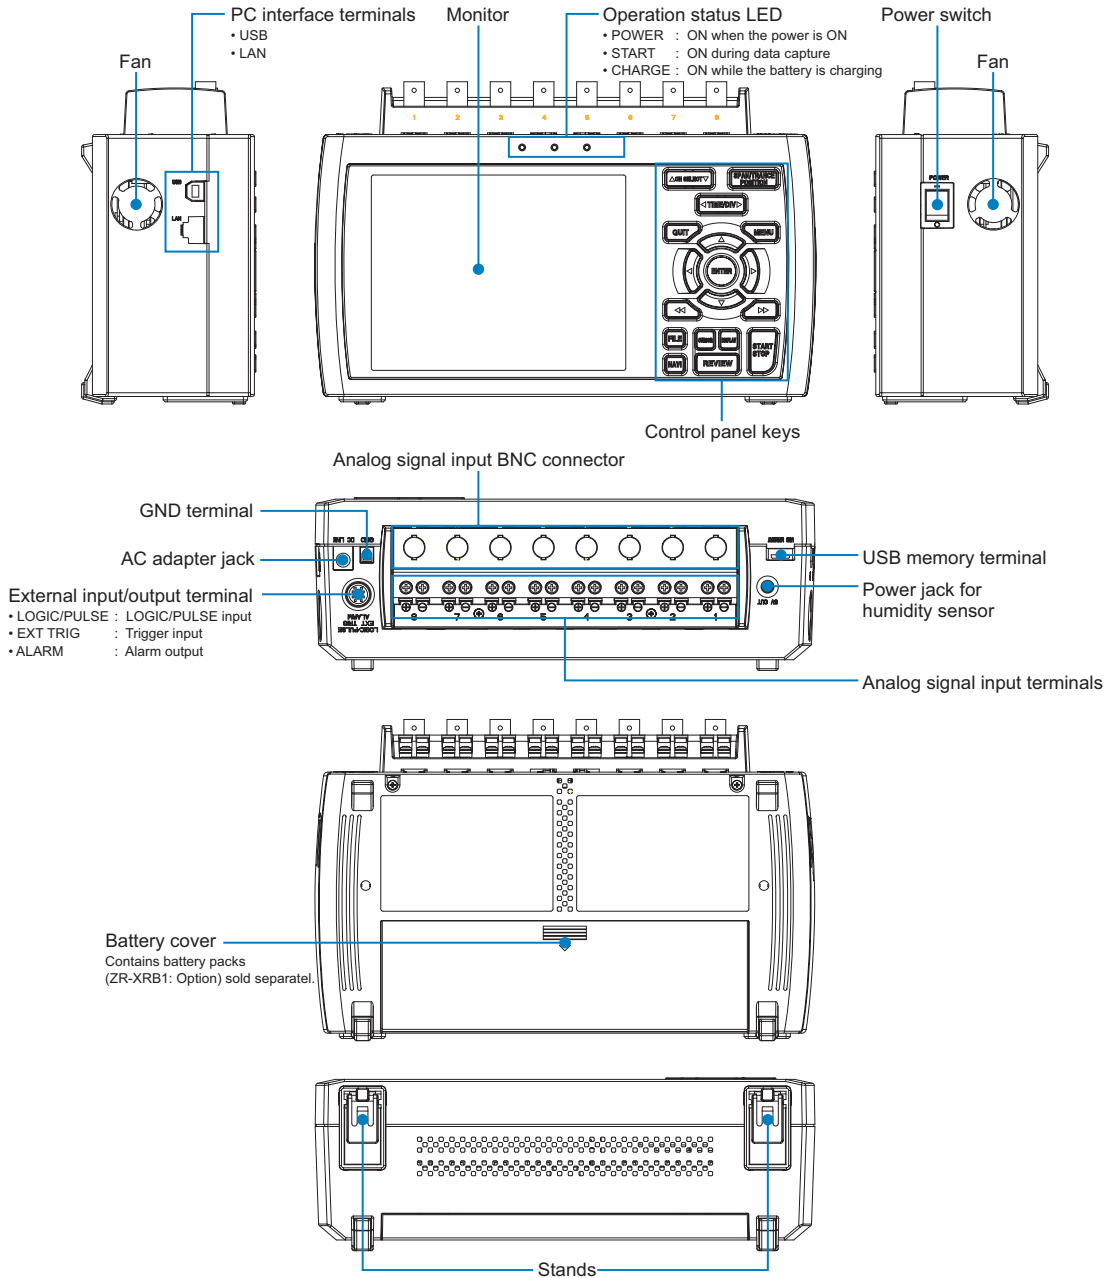

Before using the stands, read the precautions provided in "Operating Environment"

See p.18.

# Connecting the Power Cable and Turning on the Power

This section describes how to connect the power cable and turn on the power. The connection method will vary depending on the type of power supply used.


## Connecting to an AC Power Supply

Use the AC cable and AC adapter that are provided as accessories.


### Important

Be sure to use the AC cable and the AC adapter that are supplied as standard accessories. Connect the GND terminal for safe measurement. The ZR-RX70 must also be grounded when sharing a common ground level with other devices.


### 1 Plug the AC cable into the AC adapter.

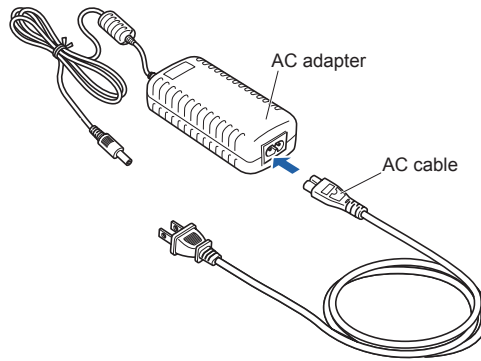

### 2 Connect the output side of the AC adapter to the AC adapter jack on the ZR-RX70.

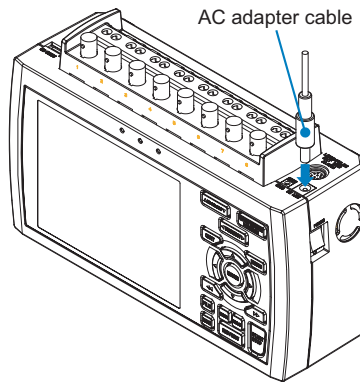

- Using the flat-blade screwdriver, press against the minus (-) button above the GND terminal, while connecting the grounding cable to the ZR-RX70. Connect the other end of the cable to ground.

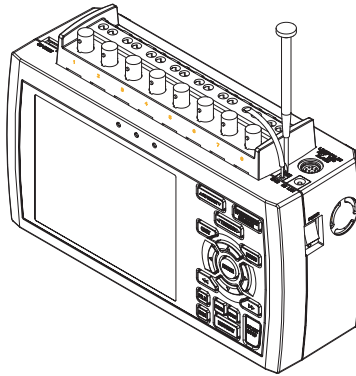

**Note**

---

The ground cable is not provided as a standard accessory and must be prepared separately.  
[Recommended Cord Diameter: AWG18/UL1007]

---

- Plug the AC cable into the mains power outlet.
- Press the power switch on the ZR-RX70 to the ON side to turn on the power.

# Connecting to a DC Power Supply


Use the optional DC cable (ZR-XRD1: option).

## Important


- Be sure to use the separately sold DC cable (ZR-XRD1).
- Do not apply voltages exceeding the rated voltage (8.5 to 24 VDC).
- Connect the GND terminal for safe measurement. The ZR-RX70 must also be grounded when sharing a common ground level with other devices.
- Be sure to check the polarity of the power supply when connecting the DC cable.

**1** Configure the tip of the DC cable (ZR-XRD1: option, 2m) to enable it to be connected to the DC power supply.

**2** Connect the DC cable connector to the power supply connector on the ZR-RX70.

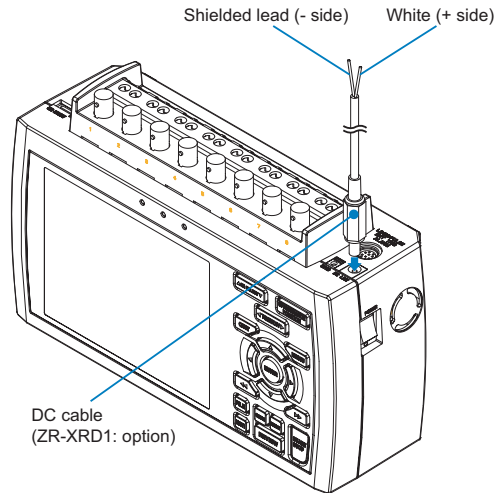

**3** Using the flat-blade screwdriver, press against the minus (-) button above the GND terminal, while connecting the grounding cable to the ZR-RX70. Connect the other end of the cable to ground.

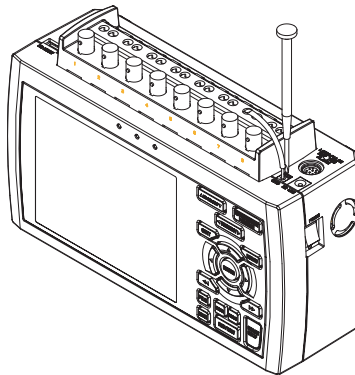

**4** Connect the DC cable to the DC power supply.

**5** Press the power switch on the ZR-RX70 to the ON side to turn on the power.



# Connecting the Analog Input Terminal

 This section describes how to connect the analog input terminal.

## Terminal Configuration and Signal Types

### Important

- Do not input signals to the screw type terminal and the BNC connector of the same channel at the same time. Doing so may cause damage to the connected device.
- Make sure that the signal input source is OFF before connecting the cables in order to prevent electric shocks. When applying voltage of 60V or above, use available safety cable in order to prevent electric shocks.
- Set the input range for the voltage to measure before you connect the analog input terminal. The maximum input voltage for the 20 mV to 1 V range is  $\pm 30$  VDC. If you apply a higher voltage without changing the input range, the data logger may be damaged.

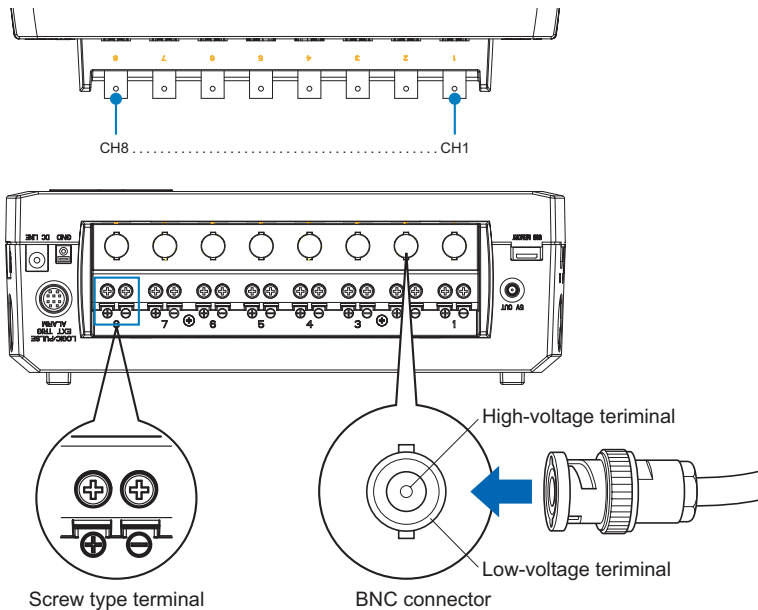

The screw type terminal and the BNC connector are internally connected. Data entered to either of them can be measured.

### Note


If you use probe, use one with attenuation rate 1/1.

# Connection Diagram


## Important

Make sure that the ZR-RX70 is not pulled by signal input cables when you connect them. The ZR-RX70 may fall down if it is pulled.


Direct voltage input

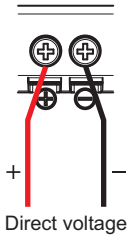

Thermocouple input

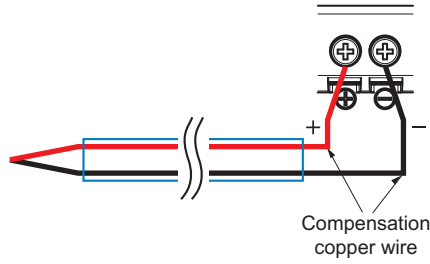

Direct current input

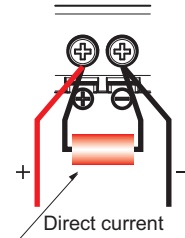

Shunt resistor  
Example: If 4-20 mA is used, connect a 250 Ω (±0.1%) resistor and measure it in the 1-5 V range.

+ ..... High-voltage terminal (terminal for high-voltage input signals)


- ..... Low-voltage terminal (terminal for low-voltage input signals)

Item	Description
Input configuration	Isolated input, scanning
Analog voltage	20, 50, 100, 200, 500 mV/F.S.; 1, 2, 5, 10, 20, 50, 100, 200, 500V/F.S.; 1-5V
Thermocouples	K, J, E, T, R, S, B, N, W (WRe 5-26)
A/D resolution	16-bit
Filter	Off, Line, 5, 50, 500Hz

# Logic Alarm Cable Connection and Functions

The logic alarm cable (ZR-XRL1: option) enables logic/pulse input, external trigger/sampling input, and alarm signal output.

Connect the logic alarm cable (ZR-XRL1: option) to the external input/output terminal as shown below.

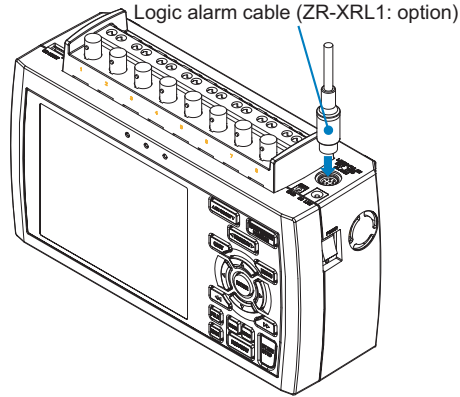


## Logic/Pulse Specifications

Item	Description
Number of input channels	4
Input voltage range	0 to +24V max. (single-ended ground input)
Threshold level	Approx. +2.5V
Hysteresis	Approx. 0.5 V (+2.5 to +3 V)

### Note

Switch between logic and pulse input.

## Internal Equivalence Circuit

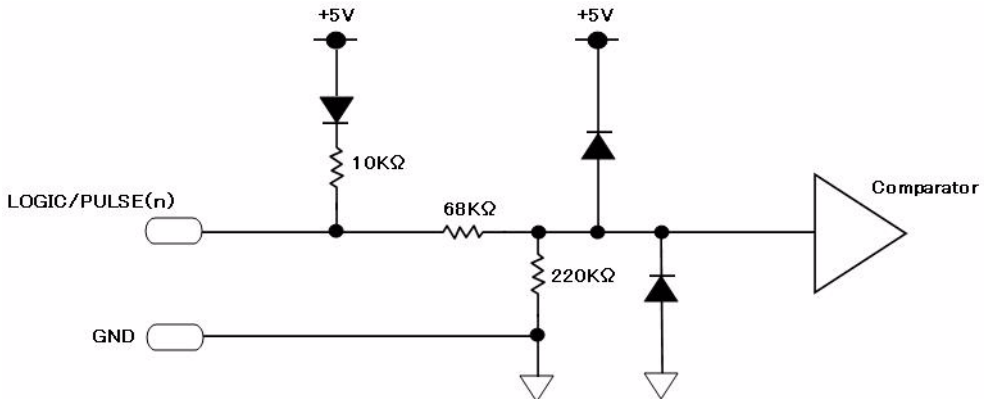




### External trigger/sampling Specifications

Item	Description
Number of input channels	1
Input voltage range	0 to +24V max. (single-ended ground input)
Threshold level	Approx. +2.5V
Hysteresis	Approx. 0.5 V (+2.5 to +3 V)


#### Internal Equivalence Circuit

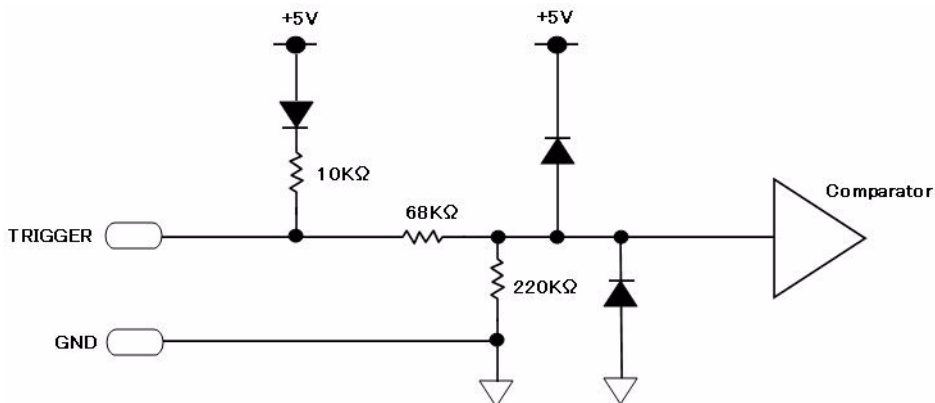

### Alarm Output Specifications

Item	Description
Number of input channels	4
Output format	Open collector output +5 V, 10 KΩ pull-up resistance Contact capacity 5 V to 24 V, 100 mA or below

#### Internal Equivalence Circuit and Example of Wiring Connection

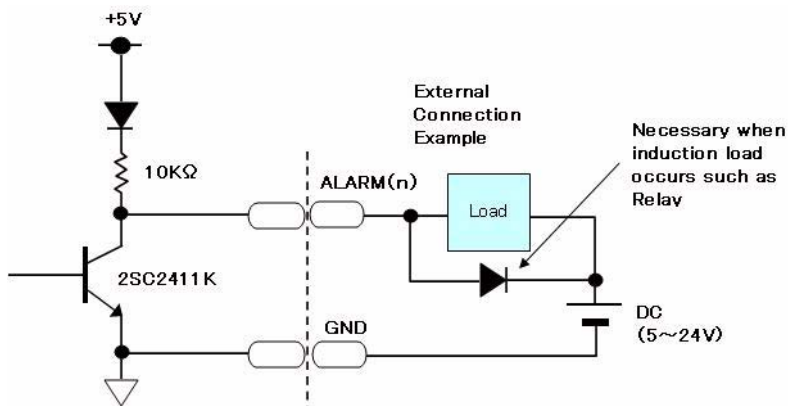


## Wiring

Cable tips are bare tips. Perform wiring for the necessary functions.

Signal Name	Channel Number	Wire Color
Logic/Pulse input	1	Orange with red dotted line
	2	Orange with black dotted line
	3	Grey with red dotted line
	4	Grey with black dotted line
Alarm output	1	White with red dotted line
	2	White with black dotted line
	3	Yellow with red dotted line
	4	Yellow with black dotted line
External trigger/sampling input		Pink with red dotted line
GND		Pink with black dotted line
		Shielded

\* Switch between logic and pulse.

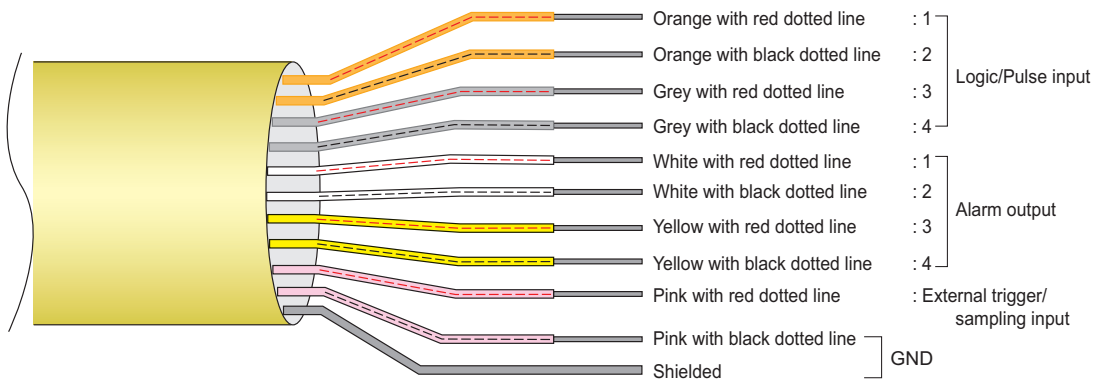

# Attaching USB Memory


Attaching USB memory to the ZR-RX70 allows you store measured data directly.

## Important

### <Specifications of supported USB memory>


- Power source : +5 V
- Power consumption : 250 mA or below
- Capacity : No limit (except each file must be within 2 GB)

You cannot use USB memory with a security function such as fingerprint authentication or with no shell (metallic part) in the connector area.

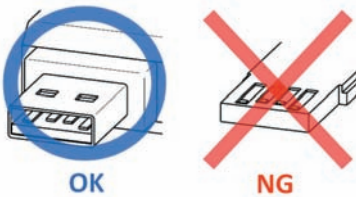

## Inserting a USB Memory

Attach the USB memory to the USB memory terminal.

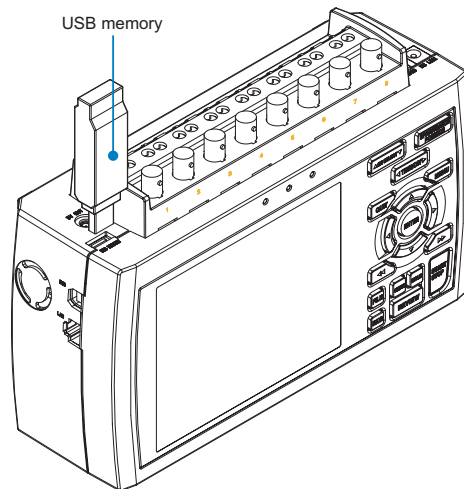

# Connecting to a PC


Use the USB, LAN Interface to connect the ZR-RX70 to a PC.

## Connection Using a USB Cable

Use the USB cable to connect the ZR-RX70 to a PC.

### Important


The USB connector is adjacent to the LAN connector. Make sure the cable is inserted into the correct connector.

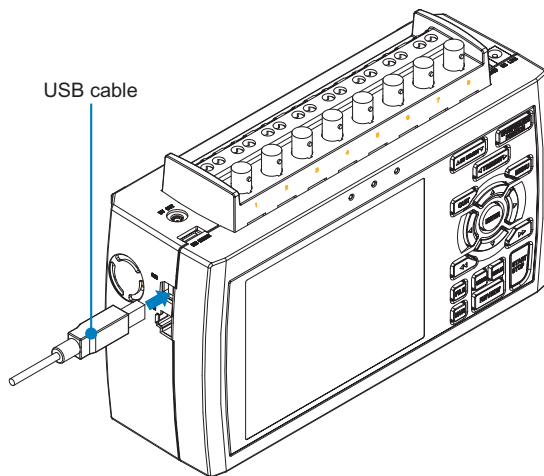

### Note


If the USB cable is used, the USB driver must be installed in your PC. Refer to "Installing the USB Driver" in the "PC Software Manual".

- Use an A-B type USB cable to connect the ZR-RX70 to a PC

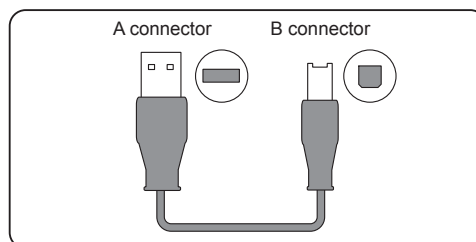


# LAN Connection

Use a LAN cable to connect the ZR-RX70 to a PC.

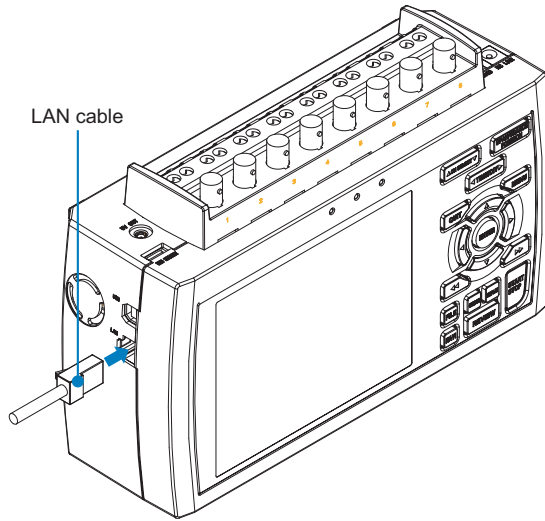


## Cable Types

- Use a crossing cable when connecting directly to a PC, without using a hub.

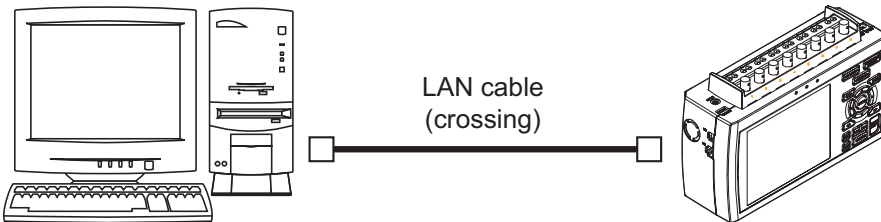

- Use a straight cable when using a hub.

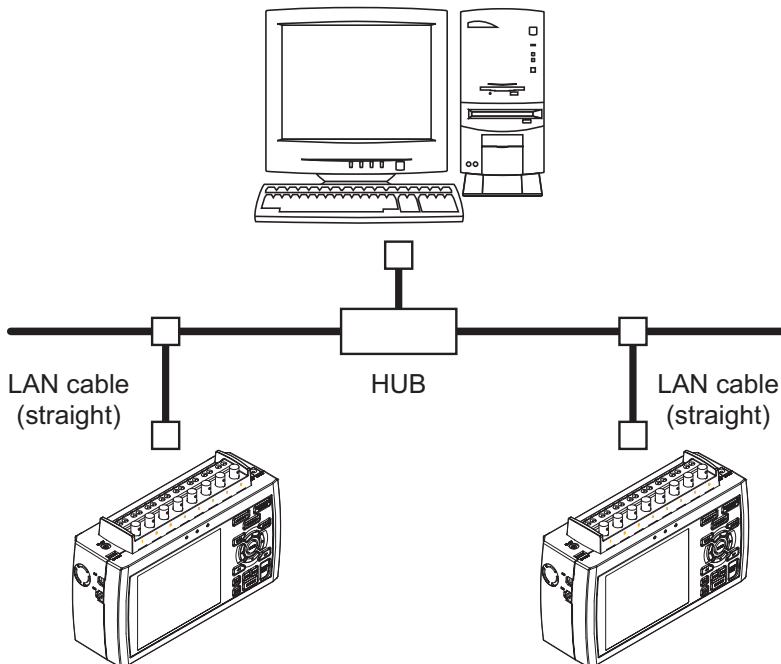

# Using the Battery Pack (ZR-XRB1: Option)

The ZR-XRB1 (option) is the only battery type that can be used with the ZR-RX70.


Two battery packs need to be mounted when you have the ZR-RX70 run on batteries.

You can also mount only one battery pack when you charge it (using the AC power source). At this time, the battery pack can be mounted on either the right or left.


The running time using batteries is about 2.5 hours when the screen saver is operating.

## Mounting the Battery Pack

- 1** While lightly pushing the grip of the battery cover, slid the cover in the direction indicated by the arrow.

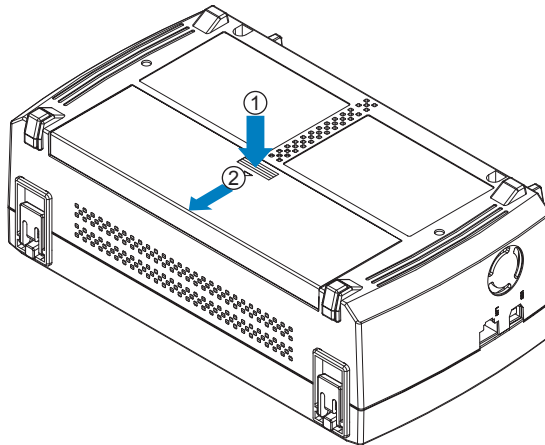

- 2** Attach the battery pack (ZR-XRB1: option).

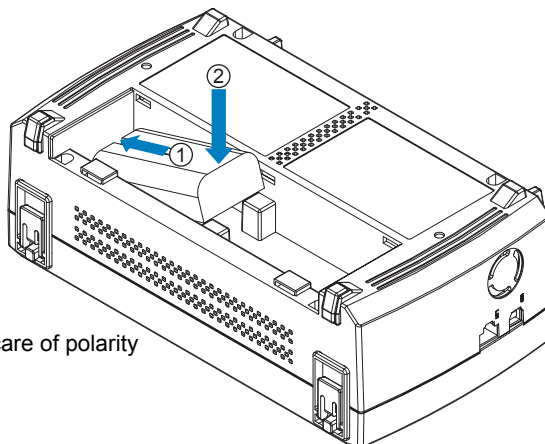


Attach the battery with care of polarity and insertion direction.

### Note

When you have the ZR-RX70 run on batteries, be sure to mount two battery packs with the same charge level. Do not use the battery packs with the different charge level at the same time.

If you are not sure about the amount, charge each battery and then attach full-charged two battery packs.

### 3 Attach the battery cover.

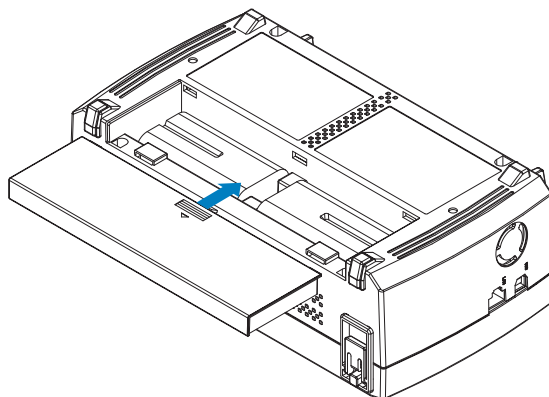

## Charging the Battery

You can mount either one or two battery packs when you charge them.


#### Note

Expected time required for charging:

- battery pack x 1: approx. 4 hours
- battery pack x 2: approx. 8 hours

The battery pack is charged by mounting it in the ZR-RX70, attaching AC adapter to the ZR-RX70.

- 1** Mount the battery pack in the ZR-RX70 (See the previous section for the mounting procedure).
- 2** Turn on the power to the ZR-RX70.
  - 📖 See "Connecting the Power Cable and Turning on the Power" p. 21.
- 3** The CHARGE LED lights.

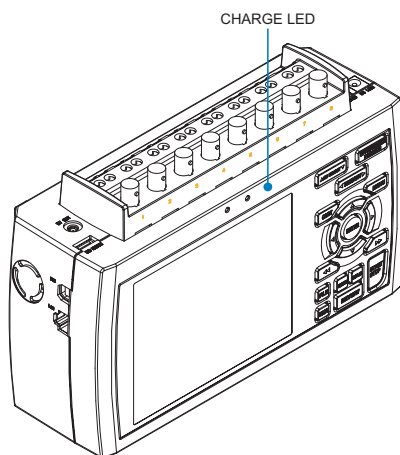

#### Note


- ZR-RX70 is equipped with a temperature monitor function which starts automatic charging as soon as it is cooled down. Therefore, depending on the internal temperature, charging may not be performed immediately. When charging is attempted while the power is ON, charging may not be performed immediately depending on the temperature environment. In such a case, set the Screen Saver settings to ON. ZR-RX70 will start charging as soon as it is cooled down. Charging temperature: 15 to 35 °C
- If input is being made directly from the DC power supply instead of the AC adapter, the DC voltage must be at least approx. 16 V.

# Connecting the Humidity Sensor (Option)

Connect the + and – lead wires of the humidity sensor (the ZR-XRH1 option) to the desired terminals, and then insert the round connector into the 5V OUT connector on the ZR-RX70.

## Important

Do not use the sensor in a strong electrolyte environment. Measured results may not satisfy to the stated.

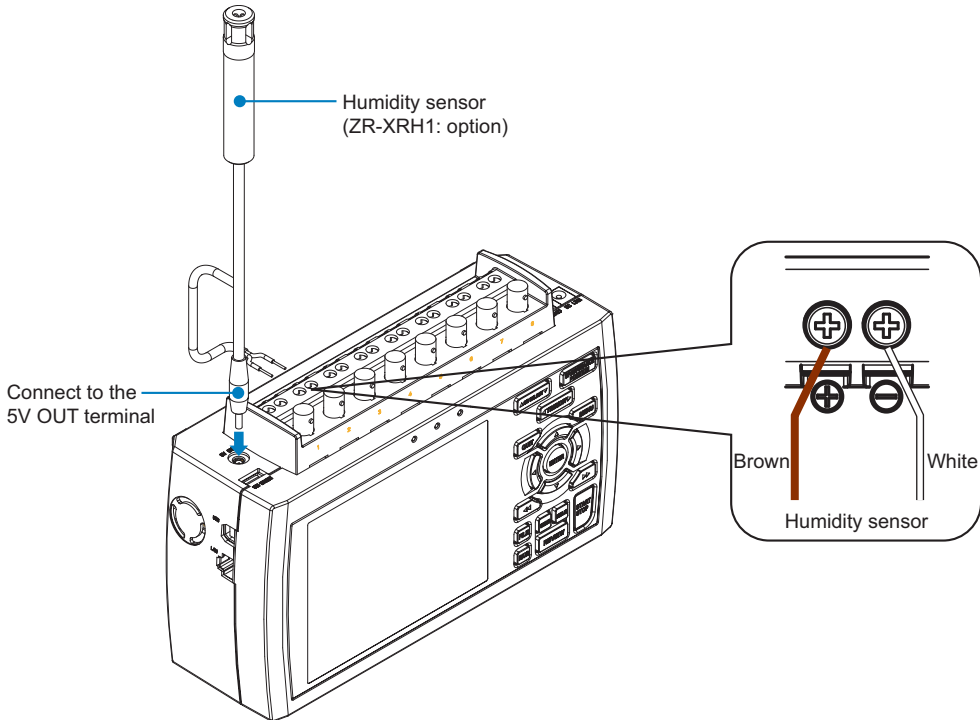



# Precautions to Observe When Performing Measurement

Please be sure to read the following carefully in order to prevent electric shocks or shorts.

## Important

- Do not apply voltage of 60 Vp-p or above between the analog input-terminal and main unit (GND terminal), or between analog input-terminals.
- Be sure to use only the AC adapter provided as a standard accessory. The rated power supply range for the adapter is 100 to 240 VAC, and the rated frequency is 50/60 Hz. Do not use any other voltages.



For details, see “Connection Diagram” p. 25.


# Noise Countermeasures

Connect the ground wire in the following method if the measured values are unstable due to noise.

**Connect the ZR-RX70's GND to ground.**


**Be sure to connect the chassis GND of the object to be measured.**

It may become effective by ensuring that the chassis GND wire of the measurement object is connected to a good ground.

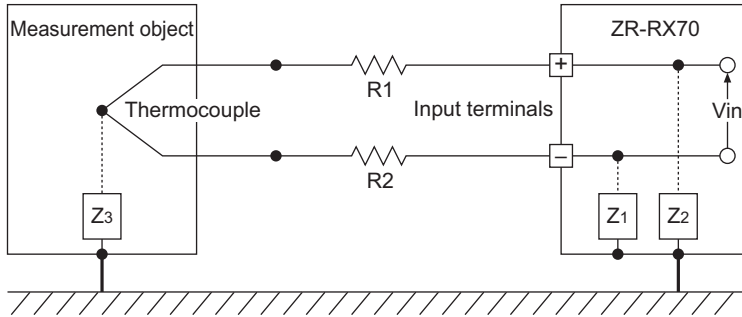

**Connect the signal chassis GND and the ZR-RX70's chassis GND.**

Use a short, thick lead to connect the chassis GND of the measurement object to the ZR-RX70's chassis GND. It will become even more effective if the ground potentials are the same.

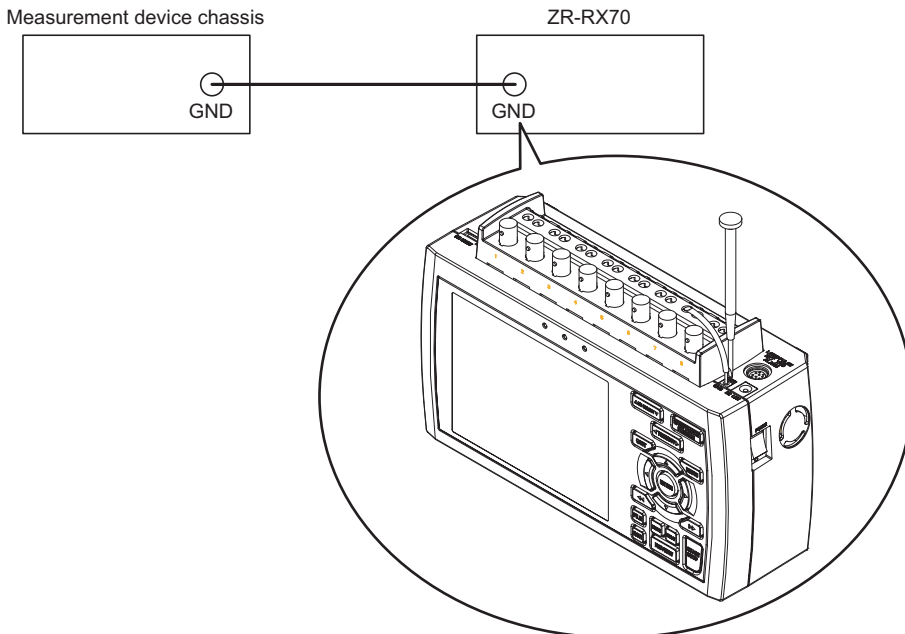

**In the AMP Settings menu, set Filter to any setting other than OFF.**

# Setting the Date and Time

If you are using the ZR-RX70 for the first time, charge the internal rechargeable battery and then make the date and time settings.

## Important


If the ZR-RX70 is not used for a period of approximately six months, the internal rechargeable battery may be discharged and the date and time may revert to the initial settings. If this happens, recharge the battery before using the ZR-RX70.

## How to Recharge the Rechargeable Battery

Using the AC adapter provided, connect the ZR-RX70 to a mains power outlet, turn on the power switch, and then leave the ZR-RX70 connected for at least 24 hours.

## How to Set the Date and Time

Press the [MENU] key, display the "OTHR" screen, and then set the date and time at the Date/Time Settings sub-menu.

 For details, see "(5)-8 Date/Time" p. 78.




# Changing the Display Language

You can choose the language displayed on the screen. The default display language is set to English when the ZR-RX70 is shipped overseas.

ZR-RX70A: Japanese

ZR-RX70A-E,-U,-B,-CHRO: English

 To change the display language, see the instructions in "OTHR:Language".


# SETTINGS AND MEASUREMENT

---







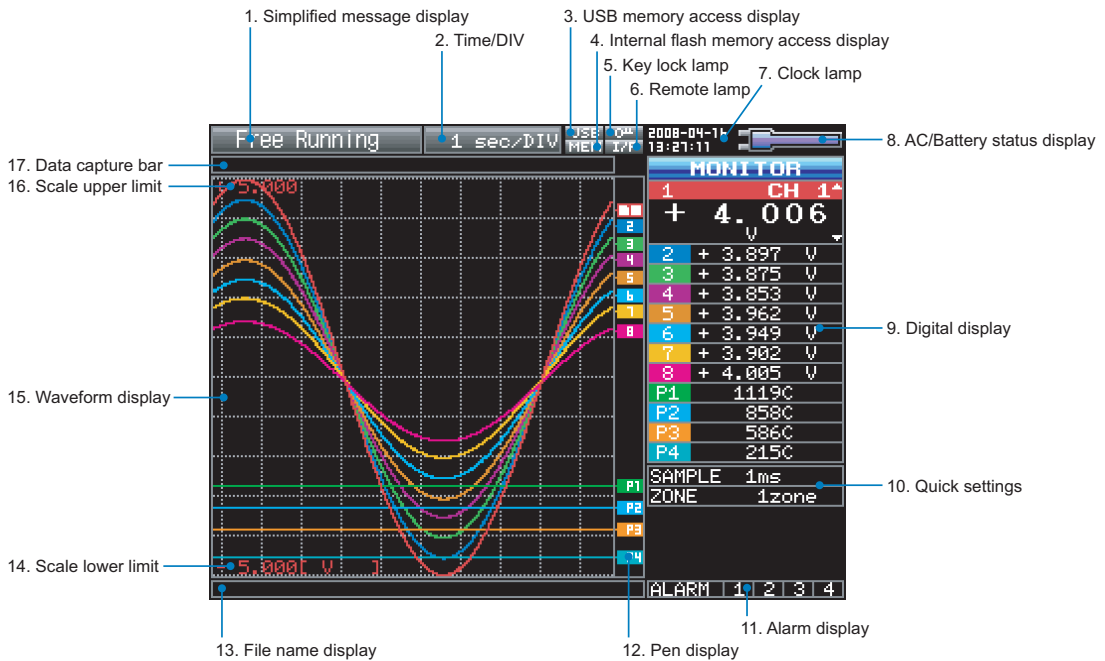













This chapter describes the setting and measurement procedures for the ZR-RX70.




<b>Window names and functions</b>	<b>40</b>
<b>Key Operation</b>	<b>44</b>
<b>Operation Modes</b>	<b>54</b>
<b>Setting Menus</b>	<b>57</b>
<b>X-Y Measurement Example</b>	<b>95</b>
<b>WEB Server Function</b>	<b>100</b>

# Window names and functions




Item	Description																								
1. Simplified message display	<p>Displays the system operation status.</p> <p><b>Important</b></p> <p>Do not turn off the power while the simplified message is “Capturing and Replaying”, “Capturing to Internal RAM”, “Capturing to Internal Flash Memory”, “Capturing to USB Memory”, or “Auto Saving” (those with an asterisk (*) in the list below). Otherwise, the captured data will be destroyed. Make sure that the message is completely gone (wait for 2 or 3 seconds) before turning off the power.</p> <table border="0"> <tr> <td></td> <td>: Startup status or data is not being captured</td> </tr> <tr> <td></td> <td>: Waiting for generation of a trigger after measurement has started</td> </tr> <tr> <td></td> <td>: Waiting for the time set on the timer</td> </tr> <tr> <td></td> <td>: Capturing data and replaying captured data</td> </tr> <tr> <td></td> <td>: Capturing data to the internal RAM of the ZR-RX70</td> </tr> <tr> <td></td> <td>: Capturing data to the internal flash memory of the ZR-RX70</td> </tr> <tr> <td></td> <td>: Capturing data to USB memory</td> </tr> <tr> <td></td> <td>: Auto-saving data (Data captured in the internal RAM is being saved to the internal flash memory or USB memory.)</td> </tr> <tr> <td></td> <td>: Replaying data in the internal RAM of the ZR-RX70</td> </tr> <tr> <td></td> <td>: Replaying data in the internal flash memory of the ZR-RX70</td> </tr> <tr> <td></td> <td>: Replaying data in USB memory</td> </tr> <tr> <td></td> <td>: Waiting for the specified repeat time to elapse</td> </tr> </table> <p> For details on data capture such as timer, trigger, and repeat, see p.69.</p> <p> For details on memory to be used for data capture, see p.65.</p>		: Startup status or data is not being captured		: Waiting for generation of a trigger after measurement has started		: Waiting for the time set on the timer		: Capturing data and replaying captured data		: Capturing data to the internal RAM of the ZR-RX70		: Capturing data to the internal flash memory of the ZR-RX70		: Capturing data to USB memory		: Auto-saving data (Data captured in the internal RAM is being saved to the internal flash memory or USB memory.)		: Replaying data in the internal RAM of the ZR-RX70		: Replaying data in the internal flash memory of the ZR-RX70		: Replaying data in USB memory		: Waiting for the specified repeat time to elapse
	: Startup status or data is not being captured																								
	: Waiting for generation of a trigger after measurement has started																								
	: Waiting for the time set on the timer																								
	: Capturing data and replaying captured data																								
	: Capturing data to the internal RAM of the ZR-RX70																								
	: Capturing data to the internal flash memory of the ZR-RX70																								
	: Capturing data to USB memory																								
	: Auto-saving data (Data captured in the internal RAM is being saved to the internal flash memory or USB memory.)																								
	: Replaying data in the internal RAM of the ZR-RX70																								
	: Replaying data in the internal flash memory of the ZR-RX70																								
	: Replaying data in USB memory																								
	: Waiting for the specified repeat time to elapse																								
2. Time/DIV	Displays the current time scale.																								

Item	Description
3. USB memory access display	<p><b>Important</b></p> <p>Do not remove the USB memory and/or turn OFF the device while the USB memory is being accessed. Failure to observe this caution may result in corrupted data and data loss.</p> <p> : No USB memory is inserted.   : USB memory is inserted but not being accessed.   : USB memory is being accessed. Do not remove the USB memory.</p>
4. Internal flash memory access display	<p><b>Important</b></p> <p>Do not turn OFF the device while the internal flash memory is being accessed. Failure to observe this caution may result in corrupted data and data loss.</p> <p> : The internal flash memory is not being accessed.   : The internal flash memory is being accessed.</p>
5. Key lock display	<p> : The keys are not locked. Normal operation is enabled.   : All the keys are locked.</p> <p> For details on memory to be used for data capture, see p.94.</p>
6. Remote display	<p> : The ZR-RX70 is in local mode. The ZR-RX70 can be operated from itself.   : The ZR-RX70 is in remote mode.  The ZR-RX70 can be operated from a PC except for some operations.  To switch from remote mode back to local mode, clear the PC connection.  The ZR-RX70 will automatically return to local mode.  If the ZR-RX70 does not return to local mode, press the QUIT key.</p>
7. Clock display	<p>Displays the current date and time.</p> <p> For details on the date and time settings, see p.78.</p>
8. AC/battery status display	<p><b>Important</b></p> <p>If the power is cut due to a power failure or a dead battery while data is being captured, the data being captured will be lost. Pay attention to the remaining battery level.</p> <p> : Running on the AC or DC power source.   : Running on the battery. The battery level is high.   : Running on the battery. The battery level is middle.   : Running on the battery. The battery level is low.   : Running on the battery. The battery is nearly out.</p>
9. Digital display	<p>Displays the input values for each channel. The [SPAN/TRACE/POSITION] key is used to change the display. The <math>\nabla</math> and <math>\triangle</math> keys or the [CH SELECT] key can be used to select the active channel (enlarged display). Moreover, the selected active channel is displayed at the very top of the waveform display.</p> <p> : Displays the input values. The input channels to be assigned can be changed using X-Y Display.   : The span of the active channel can be changed using <math>\triangleleft</math> and <math>\triangleright</math> keys.   : The position of the active channel can be changed using <math>\triangleleft</math> and <math>\triangleright</math> keys.   : The display of the active channel can be turned ON and OFF using <math>\triangleleft</math> and <math>\triangleright</math> keys.</p> <p> For details, see p.45.</p>
10. Quick settings	<p>Displays items that can be easily set. The <math>\nabla</math> and <math>\triangle</math> keys or the [CH SELECT] key can be used to make a Quick settings item active and the <math>\triangleleft</math> and <math>\triangleright</math> keys to change the values.</p> <p>During Free Running in X-Y display, the pen can be moved up/down and the screen can be cleared.</p> <p>* During data capture, the SAMPLE item cannot be changed.</p>
11. Alarm display	<p>Displays the alarm output terminal status.</p> <p>Turns red if an alarm is generated. For the channel that generated the alarm, the input value in the digital display turns red.</p>

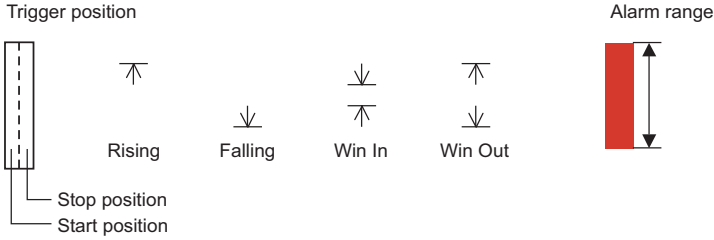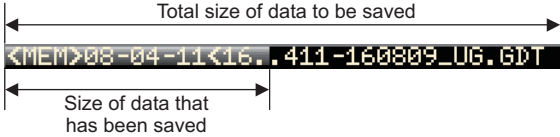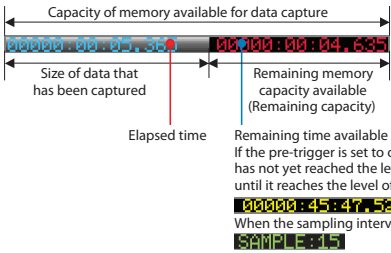
Item	Description
12. Pen display	<p>Displays the signal positions, trigger positions, and alarm ranges for each channel.</p> 
13. File name display	<p>Displays the data capture file name during the data capture operation. If auto save is performed, the progress of data save is displayed with the bar in the background. Displays the data replay file name during the data replay operation.</p> <p><b>Important</b></p> <p>Do not turn off the power while the simplified message is “Capturing and Replaying”, “Capturing to Internal RAM”, “Capturing to Internal Flash Memory”, “Capturing to USB Memory”, or “Auto Saving.” Otherwise, the captured data will be destroyed. Make sure that the message is completely gone (wait for 2 or 3 seconds) before turning off the power.</p>  <p>See also “1. Simplified message display” p. 40.</p>
14. Scale lower limit	Displays the lower limit of the scale of the currently active channel.
15. Waveform display	Displays the waveform of the input signal.
16. Scale upper limit	Displays the upper limit of the scale of the currently active channel.
17. Data capture bar	<ul style="list-style-type: none"> <li>• During data capture</li> </ul> <p>Displays the elapsing time and the remaining capacity of the memory in use. The progress of data capture is displayed with the bar in the background.</p>  <p>Capacity of memory available for data capture .....</p> <p>Indicates the capacity of free memory available for data capture at the start of data capture. For example, if 128 MB of 256-MB memory is already in use, the remaining 128 MB is displayed.</p> <p>If the data capture destination is the internal RAM, the specified time available for data capture is indicated.</p> <p>See p.67.</p> <p>* The maximum value is 2 GB per file. 2 GB is indicated if the capacity of free USB memory exceeds 2 GB.</p> <p>Size of data that has been captured .....</p> <p>Indicates how much of the above memory is currently in use for data capture.</p> <p>Remaining memory capacity available .....</p> <p>Indicates how much of the above memory remains available for data capture.</p>

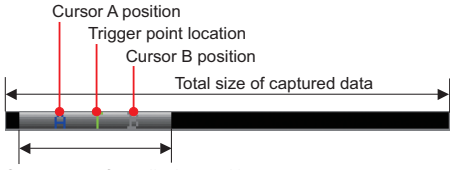


Item	Description
17. Data capture bar	<ul style="list-style-type: none"> <li>• During Data Replay Indicates the displayed position, cursor position, and trigger position.</li> </ul>  <p>The diagram shows a horizontal bar representing the data capture bar. Three vertical red lines indicate positions: 'Cursor A position' (leftmost), 'Trigger point location' (middle), and 'Cursor B position' (rightmost). A double-headed arrow below the bar spans from the start to the end of the captured data, labeled 'Total size of captured data'. A smaller double-headed arrow below the bar indicates the 'Current waveform display position', which is centered under the trigger point location.</p> <ul style="list-style-type: none"> <li>• Waiting for timer Indicates the time at which the timer expires.</li> </ul> <p>TIMER: 17 : 21</p>

# Key Operation

This section describes key operation.

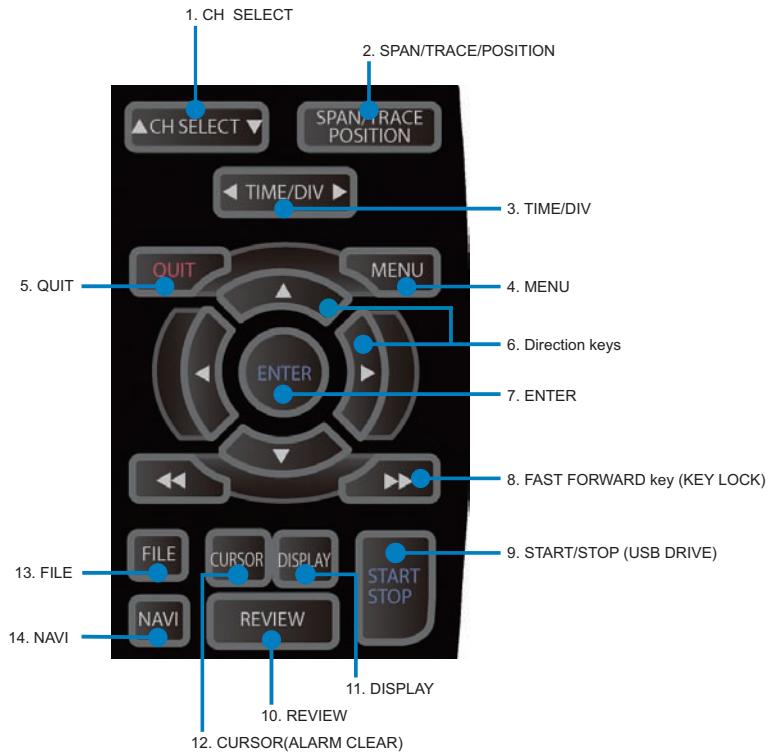


## (1) CH SELECT

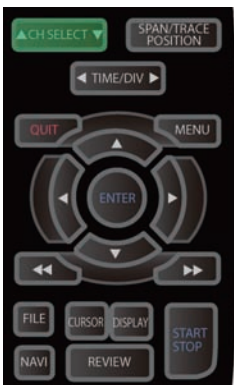


Press this switch to select the channel to change the settings in the Waveform + Digital or X-Y screen.

Press this switch to move the active display box in the Digital + Calculation Display screen.

 p.47


## (2) SPAN/TRACE/POSITION

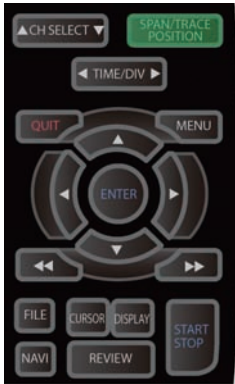


Switches the display in the digital display.

Used to change the settings related to waveform display during Free Running (when stopped), data capture, and data replay.

Pressing this key will switch displays as shown below.

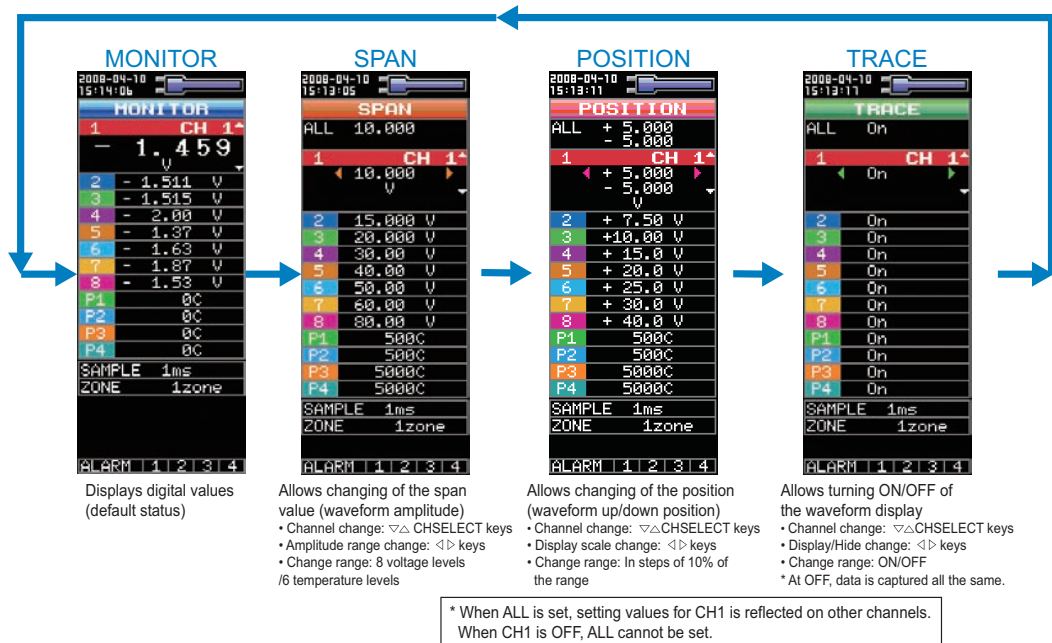


### (3) TIME/DIV

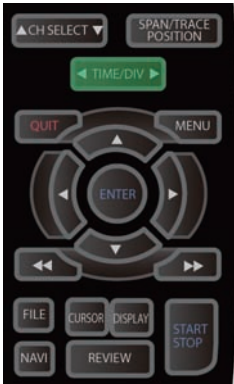

Press the [TIME/DIV] key to change the time axis display range.


However, when the sampling interval is External, "External" is displayed (in the red box) and this key is inoperative.

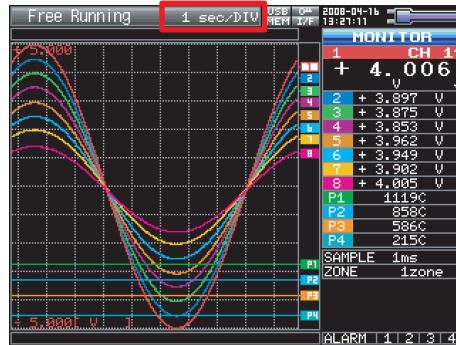

This key is used to change the colors of the waveforms in the X-Y screen.


p.95

### (4) MENU

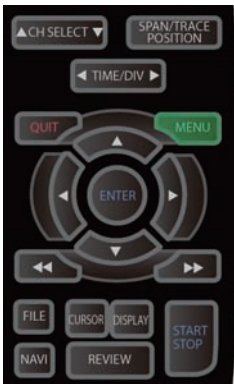

Open the settings window to capture data. For details on settings, see "Setting Menus".

p.57

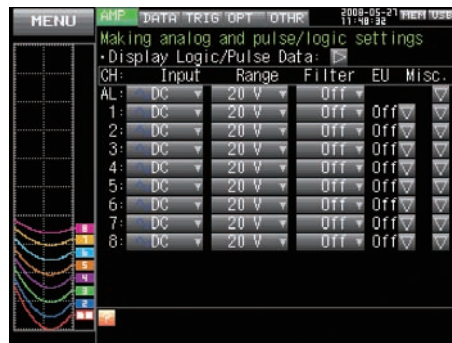

## (5) QUIT



The key is primarily used for the following operations.


- To cancel a setting during menu configuration.
- To return to the MONITOR window when the SPAN/TRACE/POSITION window is displayed.
- To cancel remote status (in which keys are disabled) through interface control.
- To close the menu screen.
- To quit data replay.

## (6) Direction keys




These keys are primarily used for the following operations.

- To move in a menu or between setting items during menu configuration.
- To move the cursor during replay.
- To move the active channel in the Waveform + Digital screen or X-Y screen ( $\Delta$  and  $\nabla$  keys).
- To change the setting of SPAN/TRACE/POSITION ( $\triangleleft$  and  $\triangleright$  keys).
- To change the quick settings ( $\triangleleft$  and  $\triangleright$  keys).
- To change the setting of the channel to be allocated in the X-Y screen ( $\triangleleft$  and  $\triangleright$  keys).
- To change the number of channels displayed in the Digital + Calculation Display screen ( $\triangleleft$  and  $\triangleright$  keys).
- To change the channel displayed in the box on the Digital + Calculation Display screen ( $\Delta$  and  $\nabla$  keys).

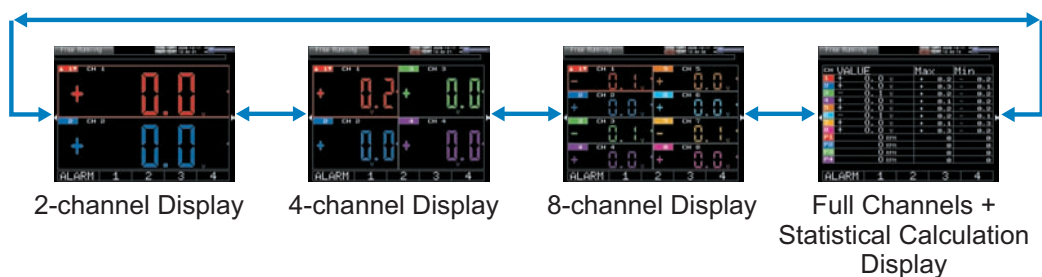


## (7) ENTER

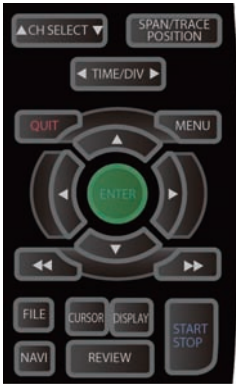

This key is primarily used for the following operation:

- To finalize setting items during menu configuration or open submenus.

## (8) FAST FORWARD keys (KEY LOCK)

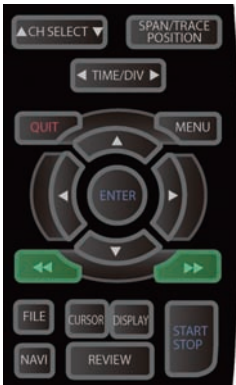


These keys are primarily used for the following operation.

- To move the cursor at high speed during replay.
- To change the operation mode in the file box.
- To set key lock (Hold down the left/right FAST FORWARD keys for at least two seconds. press again to unlock)

A password for canceling the key lock can be specified.

 For details, see p.94.


## (9) START/STOP (USB Drive Mode)

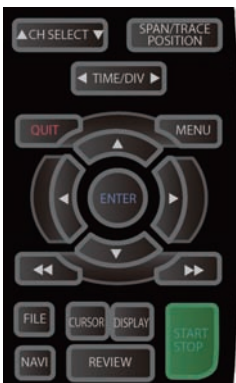

This key is used for the following two operations:

<Starting and stopping measurement>

- Starts capture during Free Running or replay.
- Stops capture during capture.

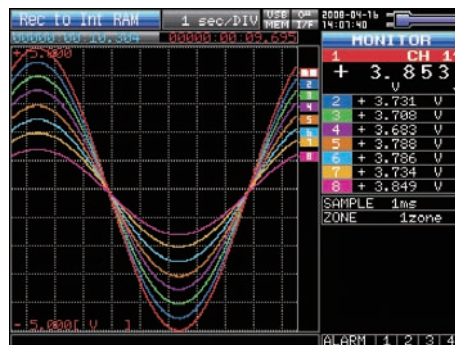

- Press this key while turning the power ON to access USB Drive Mode.

In USB Drive Mode, the internal memory is recognized by the PC as external storage media.

## <USB Drive Mode>

In USB Drive Mode, the internal memory is recognized by the PC as external storage media. With the internal memory recognized as a removable disk, files can be easily transferred, deleted, or otherwise manipulated on it.

- 1 Use a USB cable to connect the ZR-RX70 and a PC.
- 2 While pressing the ZR-RX70 [START/STOP] key, turn the power ON.
- 3 The external storage media is recognized by the PC and data exchange becomes possible.

### Note

In USB Drive Mode, the display on the ZR-RX70 is as shown below.

Keep pressing [START/STOP] key until the display becomes as shown below.



### Important

- To cancel the USB Drive Mode, reboot the MT100.
- All operations, including data capture and replay, will be disabled during USB Drive Mode.


## (10) REVIEW



This key is used to replay captured data.

- During Free Running, replays the last captured data.


If no data has been captured yet because it is just after the power-on, no data is replayed (a message "No data captured" comes up).

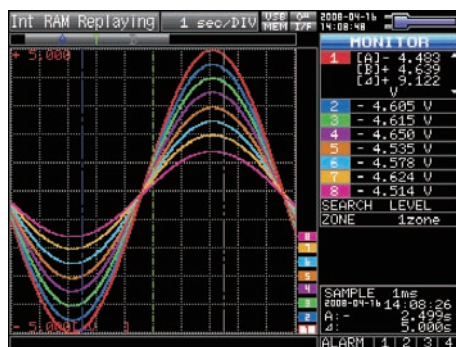

\* While capturing data, recently captured data is replayed (data capture is continued).




# (11) DISPLAY

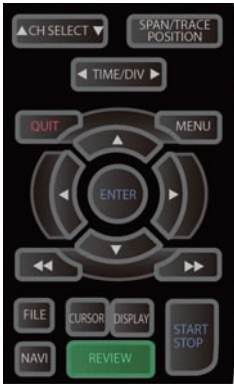

This key is used to switch the window mode.


You can switch the window mode during Free Running (when stopped) and Capturing.

Pressing this key switches the window display as follows:

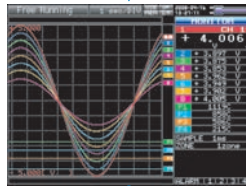


<Waveform + Digital Screen>

Displays waveforms and digital values. This is the default screen when the ZR-RX70 is powered on. The screen settings can be changed by using the [SPAN/TRACE/POSITION] key.

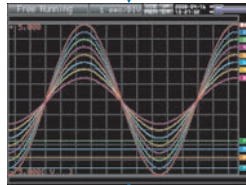

<Expanded Waveform Screen>

Displays only waveforms in a magnified view in full screen mode.

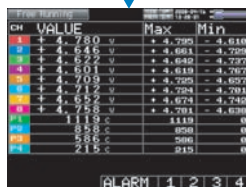


<Digital + Calculation Display Screen>

Displays digital values and calculation results in large text. The calculation settings can be made using the DATA menu.

For details, see p.63.

Press the ◀ and ▶ keys to change the number of channels displayed. The calculation results are displayed only when the Full Channels + Statistical Calculation Display is selected.

For details, see p.47.

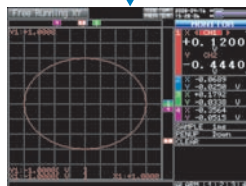


<X-Y Display Screen>

Supports four-channel X-Y display. Any given channels can be specified for X-axis and Y-axis. The settings can be made using the [SPAN/TRACE/POSITION] key, the pen can be moved up, and the screen can be cleared.

For details, see p.95.



## (12) CURSOR (ALARM CLEAR)

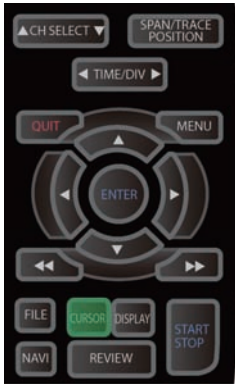


This key has different roles in different operation statuses.

<When replaying captured data>

This key is used to toggle between cursors A and B during replay.

- Waveform + Digital Screen

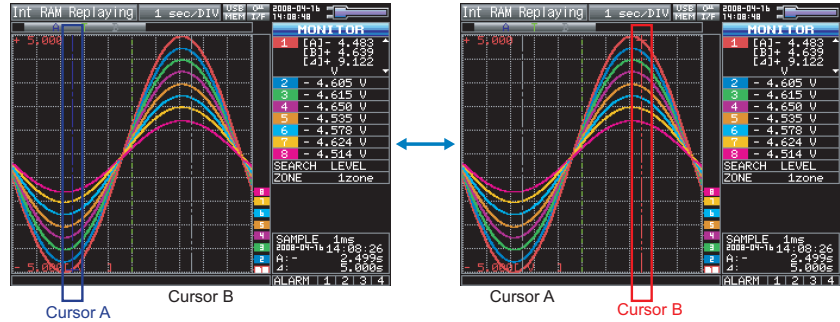


Cursor A is in blue when selected or in gray otherwise.

Cursor B is in red when selected or in gray otherwise.


The trigger point is indicated with a green line.

- X-Y Display Screen

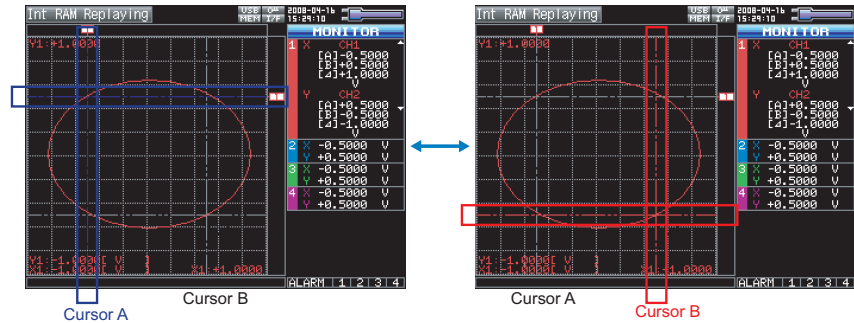

<When alarm generated>


When the alarm setting is "Hold generated Alarm", the maintained alarm is cleared.

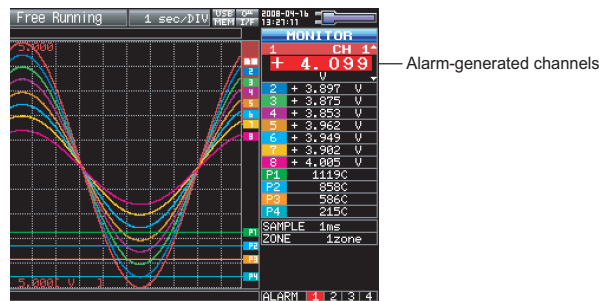


Alarm output terminal status

- Black : Alarm is cleared
- Red : Alarm is issued


## (13) FILE

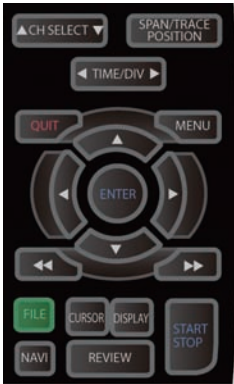

- Replays data in the internal flash memory and USB memory.
- This key is used for operations related to the internal flash memory and USB memory (such as copy and delete)
- Saves data in the internal RAM to the internal flash memory and USB memory.
- Stops the auto save process in progress.
- Overlay X-Y images in the X-Y Display screen. This is the function of displaying a thumbnail-size image of the captured data as a background.
-  For details, see p.84.
- Copies the window.
- Saves the settings currently in use or loads settings.



## (14) NAVI

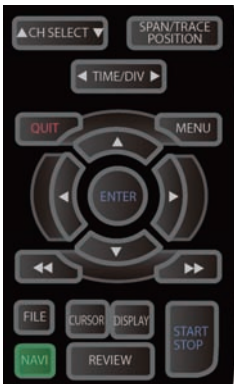

This key is used to display the key operation content during Free Running, capture, or replay.

During display of the NAVI screen, an explanation of how the key is used is displayed in the window.

To exit the NAVI screen, press the NAVI key again.

## Basic Procedures Used in Settings



The following are basic operation procedures for settings.

- 1** Press the [MENU] key to open each menu.
- 2** Use the  $\nabla\Delta$   $\triangleleft\triangleright$  key to move the cursor to the items you want to set.
- 3** Press the [ENTER] key to display a list of setting values.
- 4** Use the  $\nabla\Delta$   $\triangleleft\triangleright$  key to select a setting value.
- 5** Press the [ENTER] key to confirm the value.

The above operation is the basic procedure that may be used for each setting.


However, precise procedure may vary between setting items. Please follow the procedure indicated by each menu.

# Operation Modes


You can check the system operation status in the simplified message display.

Operation	Operation	Operation
Free Running	Start up status or data is not being captured	Free Running
Capturing	Data is being captured in the main memory or USB device.	Capturing to Internal RAM, Capturing to Internal Flash Memory, Capturing to USB memory
Capturing and Replaying	Data being captured is being replayed	Capturing and Replaying
Replaying	Captured data is being replayed	Replaying from Internal RAM, Replaying from Internal Flash Memory, Replaying from USB Memory

## Operation status transition

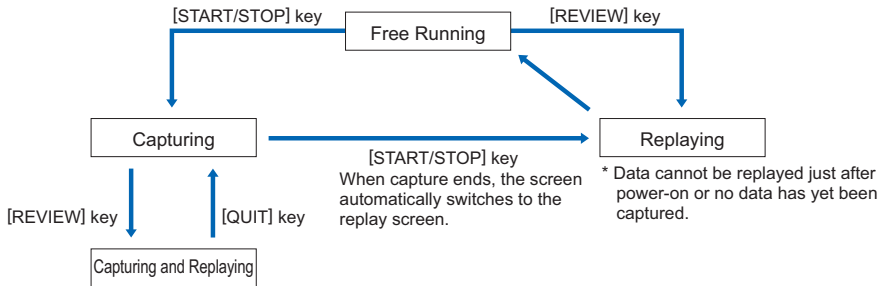

## (1) Free Running

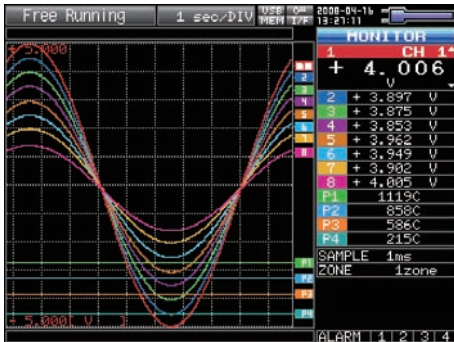


When in Free Running status, you primarily set up the system to capture data. You can check the current input signal as a waveform or digital values.

### Operations available during Free Running

Measurement parameters settings	The [MENU] key is used to change various setting items in configuration menus.
SPAN/TRACE/POSITION	The [SPAN/TRACE/POSITION] key is used to change settings.
Display mode	The [DISPLAY] key is used to change the display mode.
File operations	The [FILE] key is used to perform file-related operations.
Replay of last data (captured last time)	The [REVIEW] key is used to replay captured data.
Data replay	The [FILE] key is used to select data that you want to replay and replay it.

## (2) Capturing

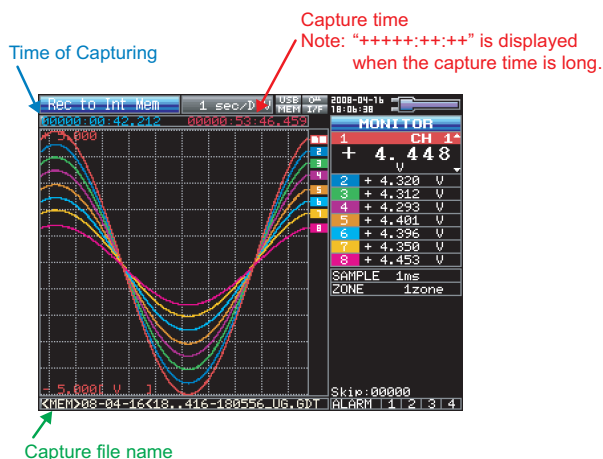


During data capture, data is captured into the Internal memory or USB device.

You cannot use the [MENU] key to change the setting.

### Operations available for change during capturing

SPAN/TRACE/POSITION	The [SPAN/TRACE/POSITION] key is used to change settings.
Display mode	The [DISPLAY] key is used to change the display mode.
Capturing and Replaying	The [REVIEW] key is used to replay captured data at the same time.

## (3) Capturing and Replaying

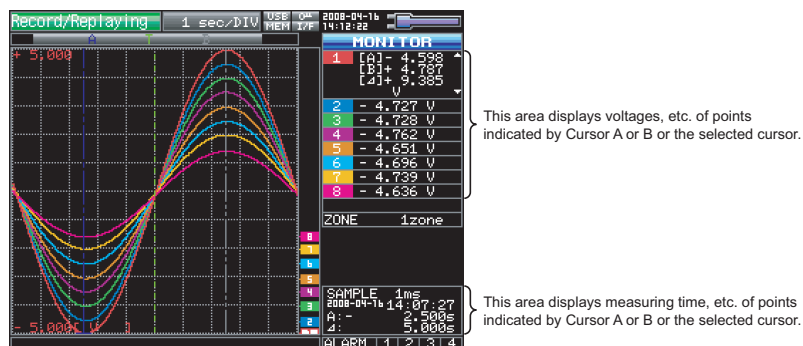


You can replay data during capture.

You can use the Direction keys (<|>) to move the cursor to captured data to check digital values.

### Operations available during Capturing and Replaying

Moving cursor	The [CURSOR] key is used to switch between cursors A and B. The < > or << >> keys are used to move the cursors.
---------------	--------------------------------------------------------------------------------------------------------------------

## (4) Replaying

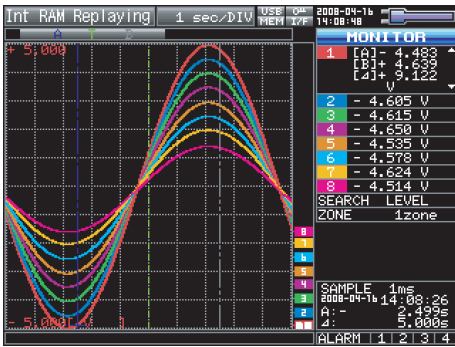

This area displays voltages, etc. of points indicated by Cursor A or B or the selected cursor.

This area displays measuring time, etc. of points indicated by Cursor A or B or the selected cursor.  
When the sampling interval is External, the start time of one data capture process and the number of sample points are displayed.

Displays captured data.


### Available operation during replaying

 SPAN/TRACE/POSITION	The [SPAN/TRACE/POSITION] key is used to change settings.
Menu operations during data replay	The [MENU] key is used to move the cursor, search data and replay set calculation.
Moving cursors	The [CURSOR] key is used to switch between cursors A and B. The <> or <<>> keys are used to move the cursors.
File operations	The [FILE] key is used to save data in the internal RAM to the internal flash memory and USB memory.

# Setting Menus

When you press the [MENU] key during Free Running, the following menu screens appear.


The menu screens are classified by the tab for each setting item.



## (1) AMP Settings

This menu is used to specify input signal-related settings.

<Analog Settings>

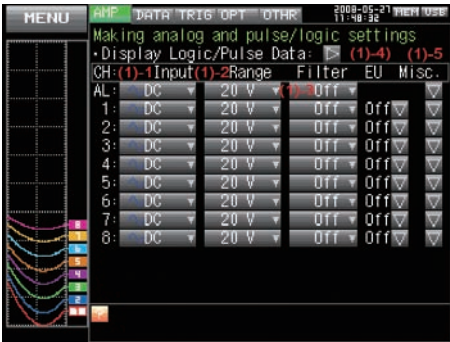

<Logic and Pulse Settings>




Setting	Selections available		
Input	Off, Voltage, Temperature, Humidity		
Range	[Voltage]	20, 50, 100, 200, 500 mV; 1, 2, 5, 10, 2	
	[Temperature]	TC-K, TC-J, TC-T, TC-R, TC-E, TC-B, TC-S	
Filter	Line, A5, 50, 500Hz		
EU (Scaling settings)	Function	Off, On	
	Measured value	Upper limit value	Numeric value input
		Lower limit value	Numeric value input
	EU output value	Upper limit value	Numeric value input
		Lower limit value	Numeric value input
	Decimal point	Select the display digit for decimal point (0 to 4).	
	Unit selection	Current, length, area, volume, speed, acceleration, frequency, weight, power, pressure, flow, temperature	
	Unit	(Selections vary depending on the selected units listed in the above.)	
User-defined unit	Text input		
Misc.	Span setting	Upper limit value	Numeric value input
		Lower limit value	Numeric value input
	Annotation setting	Text input (31 characters max.)	
	Waveform color setting	Red/Green/Blue (RGB) 0 to 31 available for each color	
	Perform Auto Zero ADJ.	▷ Execute	
	Reset Auto Zero ADJ.	▷ Execute	

Setting		Selections available
Logic and Pulse		Off, Logic, Pulse
	[Logic]	Off, On
	[Pulse]	
	Input	Off, Revolution counts, Counts, Inst.
	Filter	Off, On
	Slope	↑ H, ↓ L
	EU	
	Function	Off, On
	Measured value	Numeric value input
	EU output value	Numeric value input
	Unit selection	Current, length, area, volume, speed, acceleration, frequency, weight, power, pressure, flow, temperature
	Unit	(Selections vary depending on the selected units listed in the above.)
	User-defined unit	Text input

## Switching displays

Analog and Logic/Pulse can be switched as shown below.

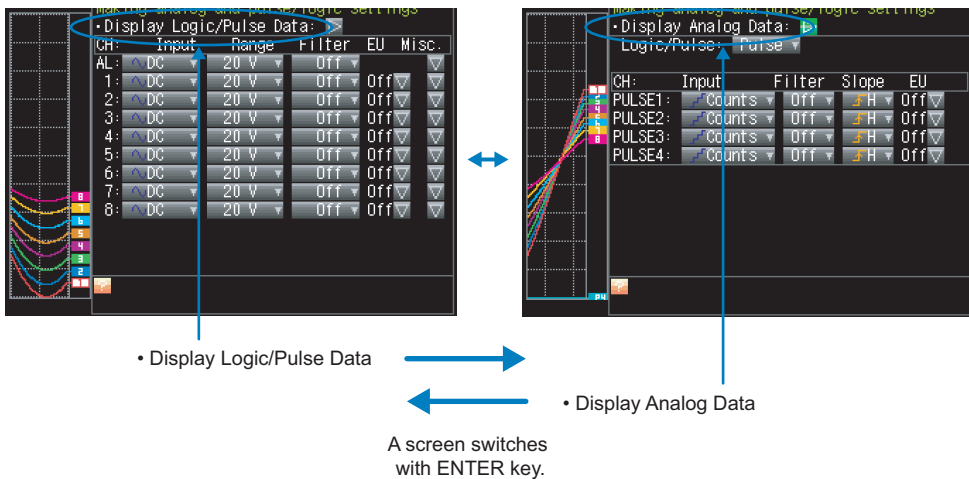

## Analog settings

This screen allows you to set conditions for analog signals.

### Note

When selecting CH ALL at the Input and the Filter, all channels are set to the same setting. For the Range, the channels which are set to same setting of the Input are set to same range setting.

For the all channels Span setting, the channels which are set to same range setting are set to same span setting.

### (1)-1 Input

Selects input conditions.

Selection	Description
Off	Disables the measurement of input signals and the waveform and digital display.
Voltage	Used for measuring direct-current voltages.
Temperature	Used for measuring temperatures.
Humidity	Used for measuring humidity with humidity sensor ZR-XRH1. This selection sets the voltage range to 1V and disables EU settings.



**(1)-2 Range**

Specifies the range of signal input to be measured.

Input setting	Selection
Voltage	20, 50, 100, 200, 500mV; 1, 2, 5, 10, 20, 50, 100, 200, 500V; 1-5V
Temperature	TC-K, TC-J, TC-T, TC-R, TC-E, TC-B, TC-S, TC-N, TC-W
Humidity	No selection

**Available SPAN Settings****<Voltage Ranges>**

Range	Maximum SPAN (measurement range)	Minimum SPAN	Minimum Resolution
20mV	-22.000 to +22.000mV	0.200mV	0.001mV
50mV	-55.00 to +55.00mV	0.50mV	0.01mV
100mV	-110.00 to +110.00mV	1.00mV	0.01mV
200mV	-220.00 to +220.00mV	2.00mV	0.01mV
500mV	-550.0 to +550.0mV	5.0mV	0.1mV
1V	-1.1000 to +1.1000V	0.0100V	0.0001V
2V	-2.2000 to +2.2000V	0.0200V	0.0001V
5V	-5.500 to +5.500V	0.050V	0.001V
10V	-11.000 to +11.000V	0.100V	0.001V
20V	-22.000 to +22.000V	0.200V	0.001V
50V	-55.00 to +55.00V	0.50V	0.01V
100V	-110.00 to +110.00V	1.00V	0.01V
200V	-220.00 to +220.00V	2.00V	0.01V
500V	-550.0 to +550.0V	5.00V	0.1V
1-5V	-5.500 to +5.500V	0.050V	0.001V

**<Temperature Ranges>**

Range	Maximum SPAN	Minimum SPAN (p-p)	Measurement Range	Minimum Resolution
K	-270 to +2000°C	50°C	-200 to +1370°C	0.1°C
J	-270 to +2000°C	50°C	-200 to +1100°C	
T	-270 to +2000°C	50°C	-200 to +400°C	
R	-270 to +2000°C	50°C	0 to +1600°C	
E	-270 to +2000°C	50°C	-200 to +800°C	
B	-270 to +2000°C	50°C	+600 to +1820°C	
S	-270 to +2000°C	50°C	0 to +1760°C	
N	-270 to +2000°C	50°C	0 to +1300°C	
W	-270 to +2000°C	50°C	0 to +2000°C	

**<Humidity Range>**

Range	Maximum SPAN	Minimum SPAN (p-p)	Minimum Resolution
	0 to +110%	1.0%	0.1%

### (1)-3 Filter

Specifies the filter setting. Use the filter when there is noise in the input.


The filter is a low-pass filter.

Selection	Description
Off	The filter is disabled.
Line	The cutoff frequency is 1.5 Hz.
5Hz	The cutoff frequency is 5 Hz.
50Hz	The cutoff frequency is 50 Hz.
500Hz	The cutoff frequency is 500 Hz.

### (1)-4 EU (Scaling)


Converts the measured signals to other units.



Setting	Description
(1) Function	Sets the function to ON or OFF.
(2) Meas. Value (Upper and Lower Limits)	Sets the upper and lower limits of the numeric value to be converted.
(3) EU Output Value (Upper and Lower Limits)	Sets the upper and lower limits of the output value after conversion.
(4) Dec pt	Specifies the decimal point position of the EU output value(s).
(5) Select	Selects the specific type of engineering units (The following selections are available). Current, length, area, volume, speed, acceleration, frequency, weight, power, pressure, flow, temperature
(6) Unit	Selects the converted unit. The units displayed in this item are those of the type selected in "Select." To set a unit not displayed in this item, define an arbitrary character string in "User-Defined Unit." The setting made in this item is displayed in "User-Defined Unit".
(7) User-Defined Unit	Selects the converted unit, which can be specified as a user-defined character string consisting of alphanumerics.  For details on text input, see p.88. The settings made in "Select" and "Unit" are reflected here.

**Note**

- If a message appears, follow the instructions by reducing the number of digits to be output by one, or leaving the number of digits as is and changing the EU value.
- The Scaling operation is calculated using a ratio of the Meas. Value or EU Output Value settings.  
 “++++/- - -” is displayed when the converted value cannot be processed by MT100.  
 Span may be changed according to the value set for Scaling.

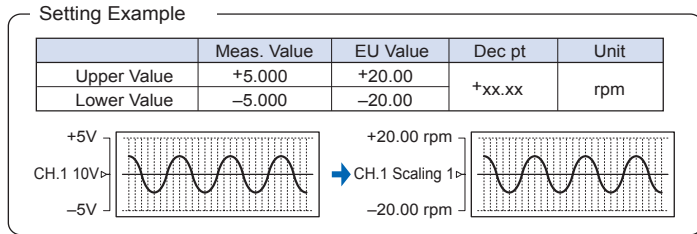

**(1)-5 Misc.**



Setting	Description
(1) Span	Sets the upper and lower limits of the span in which waveforms should be displayed.
(2) Annotation	Sets an annotation (comment) to be displayed for each channel. The annotation can be 31 characters long at the maximum. You can use alphanumeric and kana characters and symbols. For details on text input, see p.88.
(3) Waveform color setting	Red/Green/Blue (RGB) 0 to 31 available for each color
(4) Perform Auto Zero ADJ	Performs calculation using the current input voltage as the zero position voltage value.
(5) Reset Auto Zero ADJ	Cancels the zero position voltage value and displays the input voltage.
(6) [Zero Position Voltage Value]	Displays the zero position voltage value (display only).

**Logic and Pulse settings**

Specifies the digital input settings.

**(1)-6 Logic/Pulse**

Selects the digital input processing method.

Setting	Description
Off	Disables the measurement of digital input.
Logic	Digital input is processed as logic signals.
Pulse	Digital input is processed as pulse signals.

### (1)-7 Input

Sets the pulse measurement mode. This item can be set only when Pulse is selected in (1)-6.

Setting	Description
Off	Disables the pulse input.
Revol.	Counts the number of pulses per second and multiplies it by 60 to capture an rpm value.
Counts	Captures the cumulative number of pulses for each sampling interval from the start of measurement.
Inst.	Captures the number of pulses for each sampling interval.

### (1)-8 Filter

Sets the filter for digital input.

Setting	Description
Off	Disables the filter.
On	Enables the filter. The filter is effective in an environment where there is lots of noise. Filter is approximately 30 Hz (-3dB).

### (1)-9 Slope

Sets the slope (direction) to count the number of pulses. This item can be set only when Pulse is selected in (1)-6.

Setting	Description
↑ H	Counts the rising edges of pulses.
↓ L	Counts the falling edges of pulses.

### (1)-10 EU (Scaling)

Converts the measured signals to other units.



Setting	Description
(1) Function	Sets On/Off of the Scaling function.
(2) Meas. Value	Sets the numeric value to be converted.
(3) EU Output Value	Sets the upper and lower limits of the output value after conversion.
(4) Select	Selects the specific type of engineering units (The following selections are available). Current, length, area, volume, speed, acceleration, frequency, weight, power, pressure, flow, temperature
(5) Unit	Selects the converted unit. The units displayed in this item are those of the type selected in "Select." To set a unit not displayed in this item, define an arbitrary character string in "User-Defined Unit." The setting made in this item is displayed in "User-Defined Unit"
(6) User-Defined Unit	Selects the converted unit, which can be specified as a user-defined character string consisting of alphanumeric characters. <input type="text"/> For details on text input, see p.88. The settings made in "Select" and "Unit" are reflected here.

**Note**



- If a message appears, follow the instructions by reducing the number of digits to be output by one, or leaving the number of digits as is and changing the EU value.
- The Scaling operation is calculated using a ratio of the Meas. Value or EU Output Value settings.  
 “++++/- - - -” is displayed when the converted value cannot be processed by MT100.  
 Span may be changed according to the value set for Scaling.

## (2) DATA Settings

This menu is used to specify setting items related to capture and calculations.

<Capturing data to the internal RAM>

<Capturing data to the internal flash memory or USB memory>

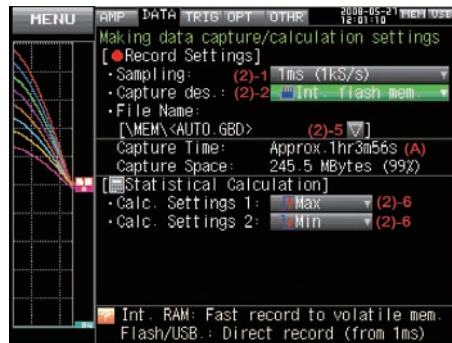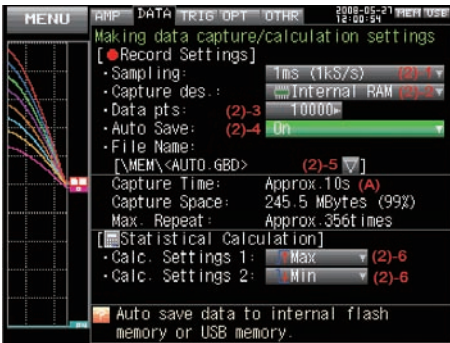

Setting	Selection
Sampling Interval	10, 20, 50, 100, 200, 500us; 1, 2, 5, 10, 20, 50, 100, 200, 500ms; 1, 2, 5, 10, 20, 30s; 1min, External
Data capture destination	Internal RAM, Internal Flash Memory, USB Memory
[Internal RAM]	Number of capture points: 10 to 1000000
Auto Save	Off, On
[On] File Name	* See the following section on the data capture
[Internal Flash Memory] or [USB Memory] File Name	* See the following section on the data capture
Function 1	Off, Average, Max, Min, Peak, RMS
Function 2	Off, Average, Max, Min, Peak, RMS

### Data capture file name

Setting	Selection
Folder (File)	Destination : MEM, USB1 Folder : Text input (if it is automatically named) File : Text input (if it is user-defined)
Name Type	Auto or User
File Format	Binary (GBD), Text (CSV)

## (2)-1 Sampling Interval

Specifies intervals used to capture data.


Capture destination	Selections available
Internal RAM	10, 20, 50, 100, 200, 500 $\mu$ s; 1, 2, 5, 10, 20, 50, 100, 200, 500ms; 1, 2, 5, 10, 20, 30s; 1min, External
Internal flash memory	1, 2, 5, 10, 20, 50, 100, 200, 500ms; 1, 2, 5, 10, 20, 30s; 1min
USB memory	1, 2, 5, 10, 20, 50, 100, 200, 500ms; 1, 2, 5, 10, 20, 30s; 1min

### Important

When the External Sampling is set, data is captured at 10 $\mu$ s as internal processing. Then, the input of an external pulse allows the next internal processing data to be written into the memory.

Therefore, both capturing interval and input error become up to 10 $\mu$ s.

You can use the external sampling function to the extent that the input error can be ignored.

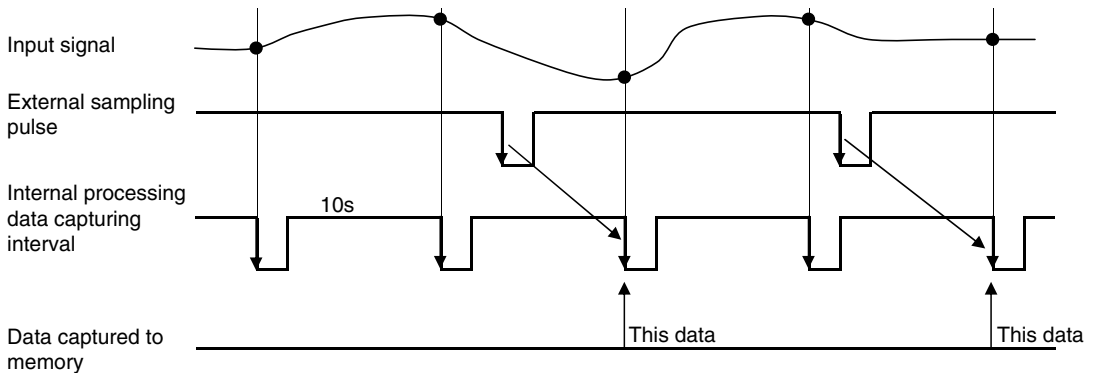





### Note

- When the data capture destination is the internal flash memory or USB memory and the capture file format is Text (CSV), sampling intervals from 1 to 5ms cannot be selected.
- When External is selected in the sampling interval, you cannot select External Input in the trigger setting. When the External Input is already set, the trigger is changed to Off.

## (2)-2 Data Capture Destination

Specifies the data capture destination for captured data.

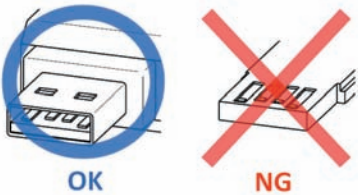Selection	Description
Internal RAM	<p>Captures the measured data to the internal RAM. The data will be lost when the power is turned off. The data will be overwritten when next data is captured. Check the waveform and, if it is OK, press the [File] key to save the data.</p> <p> See p.80.</p> <p>If Auto Save is set to On, data will be automatically saved.</p> <p> See "(2)-4 Auto Save" p. 66.</p> <p><b>Note</b> This selection can be used for any sampling interval. Specify this selection if you want to capture data at higher rates than 500 us. This selection comes in handy for saving the memory space if you check the waveform of captured data first and save only necessary data.</p>
Internal flash memory	<p>Captures the measured data to the internal flash memory. The data once captured is retained even after the power is turned off. This selection cannot be specified if the sampling interval is from 10 to 500us. Select a sampling interval lower than 1ms..</p> <p><b>Note</b> Sampling intervals from 1 to 5ms cannot be selected when the capture file format is Text (CSV).</p>
USB memory	<p>Captures the measured data to the USB memory. The data once captured is retained even after the power is turned off. This selection cannot be specified if the sampling interval is from 10 to 500 us. Select a sampling interval lower than 1 ms.</p> <p><b>Note</b></p> <ul style="list-style-type: none"> <li>• Sampling intervals from 1 to 5ms cannot be selected when the capture file format is Text (CSV).</li> <li>• Large-capacity USB memory can also be used. The use of USB memory comes in handy when you want to capture data many times or the capacity of internal flash memory is not sufficient for long measurement (Data up to 2GB can be captured per data capture). You cannot use USB memory with a security function such as fingerprint authentication or with no shell (metallic part) in the connector area.</li> </ul> <div style="text-align: center;">  <p><b>OK</b>                      <b>NG</b></p> </div>

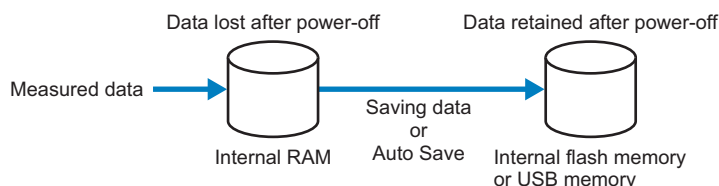

## (2)-3 Number of Capture Points

Specifies the number of data points to be captured to the internal RAM. This item can be set only when Internal RAM is selected in (2)-2.

Before setting this item, check the time available for data capture ((A) in the figure).

## (2)-4 Auto Save

Specifies whether to automatically save data captured to the internal RAM. This item can be set only when Internal RAM is selected in (2)-2.

Selection	Description
Off	Disables auto save of data. Data captured to the internal RAM is lost when the power is turned off or next data is captured. If you want to keep data, press the [FILE] key to save the data.
On	Enables auto save of data. Data captured to the internal RAM is saved either to the internal flash memory or USB memory. <b>Note</b> When you set a faster sampling interval or increase the number of captured data, the auto save process may not be completed by the time a data capture to the internal RAM ends. In such a case, you cannot start the next capture with the [Start/STOP] key until the current auto save is completed. If you want to stop the auto save process in progress, press the [FILE] key to open the menu screen and select Stop Auto Save on the screen. The data already saved is retained even if you stop the auto save process in progress.

## (2)-5 File Name



Specifies the name of a file or folder to which you want to capture data or auto-save data.

<If the Name Type is Auto>



<If the Name Type is User>



Setting	Description
(1) Folder	Specifies a folder to which you want to capture (or save) data.  For details, see the file box on p.85.
(2) File	Specifies a file to which you want to capture (or save) data.  For details, see the file box on p.85.
(3) Name Type	Sets how a data file is named. Auto : Automatically gives a name to a file. Example: 20050101-123456_UG.GBD Number part.....Date and time at which a file was created * In this example, the date is January 1, 2005 and the time is 12:34:56. UG .....User number for data capture UG (Guest) U1 (User 1) U2 (User 2) GBD .....Data format GBD (Binary format) CSV (Text format) When the Repeated capturing is On, the text of "rep" showing repeat and a number showing the number of times of repeating are added as shown by 20050101-123456_UG_rep001.GBD. User : Captures data to a file with a user-defined name.



Setting	Description
(4) File Format	<p>Sets the file format in which you want to save data.</p> <p>GBD : Creates a data file in Omron proprietary binary format. * Prevents tampering of data.</p> <p>CSV : Creates a data file in a text format. * Cannot be replayed on the ZR-RX70.</p> <p>When the data capture destination is the internal flash memory or USB memory and the sampling interval is from 1 to 5 ms, you cannot select CSV. Select a sampling interval lower than 10ms.</p>

### Important

- If you perform data capture with Name Type set to Auto, data will be saved in folders automatically created with the date and time as their respective names (The time folder is created below the date folder).
- If you perform data capture repeatedly with Name Type set to Auto, after certain number of files are captured, a new time folder is created and data is captured to the folder.
- When you save files, create a folder and then save the files in the folder.  
Regardless of the remaining capacity, if you try to save files in the root directory, due to file restrictions you may not be able to save files.
- The displayed Capture Time may vary according to the sampling interval or number of capture channels.


### Note

Changing the sampling interval, capture destination, or number of capture points will change the screen display of the time available for data capture, capacity available for data capture, and possible number of times of repeating. If you find that the measuring time exceeds the capacity available for data capture, either change the sampling interval or capture destination (to large-capacity USB memory).

Time available for data capture ..... Indicates how long data can be captured.

Capacity available for data capture ..... Indicates the capacity available for data capture with the memory size if the data capture destination is the internal flash memory or USB memory. The figure shown in brackets is the percentage of free memory space to the total memory size.

Possible number of times of repeating ..... Indicates how many times data captured to the internal RAM can be saved to the save destination device if Auto Save is set to On. Beware of using this setting particularly when Repeated Capturing is set to On for the trigger.

 For details, see "(3) TRIG Settings" p. 69

The time available for data capture is calculated for data up to 2GB. If the capacity of free USB memory is 2GB or more, "over" is displayed.

When the time available for data capture (for 2GB) is exceeded, after the data of 2GB is captured, the capture of remaining data is automatically resumed to another file.

The data between the stop and resumption of the capture process is not captured when the sampling interval is too fast.

```
Capture Time: 23301d14hr56m over
Capture Space: 2.5 GBytes (63%)
```




## (2)-6 Statistical Calculation Settings

The ZR-RX70 can perform two statistical calculations.

This section describes specifying the statistical calculation settings.

Selection	Description
Off	Calculation is not performed.
Average	Displays the simple average value of data being captured.
Max	Displays the maximum value of data being captured.
Min	Displays the minimum value of data being captured.
Peak	Displays the peak value of data being captured.
RMS	Displays the effective value of data being captured. The calculation formula is as shown below. $\text{R.M.S} = \sqrt{\sum D^2/n}$ D: data    n: number of data

### Note

- The calculation results are displayed in the Digital + Statistical Calculation Display screen. Switch to the Full Channels + Statistical Calculation Display using the and keys.  
 For details, see "(6) Direction keys" p. 47
- Calculation will start upon power ON. Pressing the [START] key to begin measurement will clear the calculation.
- The sampling speed for calculation corresponds to the speed set in the DATA menu. However, when the sampling speed is higher than 5ms, it is set to 5ms.

### (3) TRIG Settings

This menu is used to specify trigger conditions and alarm settings.



Setting		Selections available
Timer mode		Off, Date and Time, Every Day Cycle, Every Hour Cycle
[Date and Time]	Start side source setting	Date: January 1, 2005 to December 31, 2035 Time: 00:00 to 23:59 (Hour:Minute)
	Stop side source setting	Date: January 1, 2005 to December 31, 2035 Time: 00:00 to 23:59 (Hour:Minute)
[Every Day Cycle]	Start side source setting	Time: 00:00 to 23:59 (Hour:Minute)
	Stop side source setting	Time: 00:00 to 23:59 (Hour:Minute)
[Every Hour Cycle]	Start side source setting	Time: 00:00 to 59:59 (Minute:Second)
	Stop side source setting	Time: 00:00 to 59:59 (Minute:Second)
Start side source setting		Off, Level, External Input, Time
[Level]	Combination	Level OR, Level AND, Edge OR, Edge AND
	Mode	Analog : Off, ↑ H, ↓ L, Win In, Win Out Logic : Off, ↑ H, ↓ L Pulse : Off, ↑ H, ↓ L, Win In, Win Out
	Level	Numeric value setting
[Time]		0000:00:01 to 9999:59:59 (Hour:Minute:Second)
Stop side source setting		Off, Level, External Input, Time
[Level]	Combination	Level OR, Level AND, Edge OR, Edge AND
	Mode	Analog : Off, ↑ H, ↓ L, Win In, Win Logic : Off, ↑ H, ↓ L Pulse : Off, ↑ H, ↓ L
	Level	Numeric value setting
[Time]		0000:00:01 to 9999:59:59 (Hour:Minute:Second)
Pre-trigger		0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100%
Repeated capturing		Off, On
Repeat interval		0000:00:00 to 9999:59:59 (Hour:Minute:Second)
Timer trigger information		▽ Display Information
Alarm level settings	Alarm Hold	Off, On
	Mode	Analog : Off, ↑ H, ↓ L, Win In, Win Logic : Off, ↑ H, ↓ L Pulse : Off, ↑ H, ↓ L
	Level	Numeric value setting
	Output	1, 2, 3, 4


### (3)-1 Timer Mode

Sets the timer function.

When the timer function is used (set to a selection other than OFF), data capture is enabled only during the time for which the timer is set.


Selection	Description
Off	The timer function is not used. Data capture starts according to triggers.
Date and Time	Data capture starts when a trigger is generated only during certain (specified) date and time. ⇒ When Date and Time is selected, set the date and time both on the start and stop sides.
Every Day Cycle	Data capture starts when a trigger is generated only during the same (specified) time every day. ⇒ When Every Day Cycle is selected, set the time (hour and minute) both on the start and stop sides.
Every hour cycle	Data capture starts when a trigger is generated only during the same (specified) time every hour. ⇒ Set the time (minute and second) both on the start and stop sides.

The actual timing conditions for data capture are related to triggers.


 See also Sections “(3)-2 Start Side Source Settings” p. 70, “(3)-3 Stop Side Source Settings” p. 71, and “(3)-7 Timer Trigger Information” p. 72.

### (3)-2 Start Side Source Settings

Specifies trigger conditions to start data capture.


Selection	Description
Off	Starts capturing data unconditionally (when the [START/STOP] key is pressed or the time specified for the timer function arrives).
Level	Starts capturing data when a specified level condition is met. ⇒ When Level is selected, set the condition for each channel.  See p.72.
External Input	Starts capturing data when an input signal is received from an external trigger terminal. * A trigger is generated when the voltage changes from 5V (open) to 0V (short circuit to GND).
Time	Data capture starts after a specified length of time elapses after the [START/STOP] key is pressed or the time specified for the timer function is reached. ⇒ When Time is selected, set the time to start capturing data.

The actual timing conditions for data capture are related to the timer.


 See also Sections “(3)-1 Timer Mode” p. 70, “(3)-3 Stop Side Source Settings” p. 71, and “(3)-7 Timer Trigger Information” p. 72.

### (3)-3 Stop Side Source Settings

Specifies trigger conditions to stop data capture.

Selection	Description
Off	Stops capturing data unconditionally (when the [START/STOP] key is pressed or the time specified for the timer function arrives).
Level	Stops capturing data when a specified level condition is met. ⇒ When Level is selected, set the condition for each channel.  See p.72.
External Input	Stops capturing data when an input signal is received from an external trigger terminal. * A trigger is generated when the voltage changes from 5V (open) to 0V (short circuit to GND).
Time	Stops capturing data after a specified length of time elapses after starting data capture. ⇒ When Time is selected, set the time after which you want to stop capturing data.


The actual timing conditions for data capture are related to the timer.

 See also Sections “(3)-1 Timer Mode” p. 70, “(3)-2 Start Side Source Settings” p. 70, and “(3)-7 Timer Trigger Information” p. 72.

### (3)-4 Pre-trigger

Specifies the percentage of data to be captured before a trigger is generated.

\* Pre-trigger can be selected only when the data capture destination is the internal RAM and the start side source setting is other than OFF.

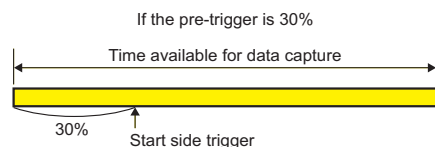

### (3)-5 Repeated Capturing

Sets the repeat function for repeated capturing.

This selection can be specified when the data capture destination is the internal RAM or the stop side source setting is other than Off.

Selection	Description
Off	The repeat function is not used.
On	The repeat function is used. After one data capture process ends, the next data capture process starts (or a trigger is waited for if the start side source setting is other than Off).

### (3)-6 Repeat Interval

Specifies the interval from the start of one data capture process to the start of another data capture process if the repeat function is used.

This selection can be specified when the following three conditions are all met:

- the Repeated capturing is On,
- the start side source setting is Off or Time, and
- the stop side source setting is set to Time, or the stop side source setting is set to Off and the data capture destination is set to Internal RAM.


### (3)-7 Timer Trigger Information

Displays the timer and trigger information in an easy-to-understand manner.

Example

Timer Mode: Every Day Cycle  
 Start Side Source Setting: Level  
 Stop Side Source Setting: Time  
 Repeated Capturing: On

Data capture is enabled only in this interval.  
 Data is actually captured in this interval.

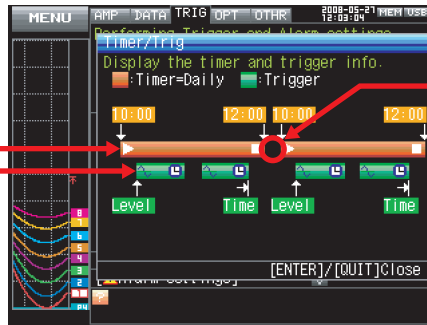

A trigger generated in this interval will not start data capture.

\* This is only a conceptual illustration in which the graph length, number of times of repetition, and other items do not agree with the actual time.

### (3)-8 Alarm Setting

Specifies alarm generation conditions and output destinations. When the conditions specified here are met, an alarm is output from the alarm output terminal (specify the output destination number for each channel).

 
With "Hold Generated Alarm" set to "Hold", the alarm status is maintained after the conditions are met once even if they do not continue to be met (Press the [CURSOR] key to clear the alarm).

See "Trigger Level Settings/Alarm Level Settings" p. 72.


## Trigger Level Settings/Alarm Level Settings

If the start side source setting or stop side source setting is "Level", specify detailed conditions for each channel.

The overall structure of level triggers are as shown below.



 \* Pulse and Logic are toggled back and forth.  
 \* The Logics 1 to 4 are fixed to pattern comparison.



\* Pulse and Logic are toggled back and forth.  
 \* Specify an alarm output destination for Pulse and Logic for each channel. The conditions are ORed for each alarm output destination.  
 Example) Suppose CH1 and CH2 are set to Output 1 and CH3 and CH4 to Output 2.  
 If either CH1 or CH2 meets the conditions, Alarm Output 1 occurs.  
 If either CH3 or CH4 meets the conditions, Alarm Output 2 occurs.

#### <Trigger Level Settings>



#### <Alarm Settings>



Setting	Description
(1) Combination	<p>Sets the combination of trigger conditions set for each channel.</p> <p>Level OR : Starts (stops) capturing data when at least one trigger condition is met. Each condition is a level operation.</p> <p>Level AND : Starts (stops) capturing data when all trigger conditions are met. Each condition is a level operation.</p> <p>Edge OR : Starts (stops) capturing data when at least one trigger condition is met. Each condition is an edge operation.</p> <p>Edge AND : Starts (stops) capturing data when all trigger conditions are met. Each condition is an edge operation.</p>
(2) Mode	<p>Specifies the mode for trigger comparison for each channel.</p> <p>Off : Disables triggers for the set channel.</p> <p>↑ H (Rising): Generates a trigger when an input signal is above the specified level.</p> <p>↓ L (Falling): Generates a trigger when an input signal is below the specified level.</p> <p>Win In : Generates a trigger when an input signal is (has come) between the upper and lower limit levels set for each channel. * There is no setting for a logic channel.</p> <p>Win Out : Generates a trigger when an input signal is not (has moved out from) between the upper and lower limit levels set for each channel. * There is no setting for a logic channel.</p>
(3) Level	<p>Specifies the level for trigger comparison.</p> <p>Set one level for comparison if the mode is set to ↑ H (Rising) or ↓ L (Falling).</p> <p>Set two levels for comparison if the mode is set to Win In or Win Out.</p>
(4) Hold Generated Alarm	<p>Specifies the operation that occurs when the alarm conditions are met once and then are no longer met.</p> <p>Hold : Maintains the alarm status when the alarm conditions are met once and then are no longer met. (Press the [CURSOR] key to clear the alarm).</p> <p>Do Not Hold: Clears the alarm status when the alarm conditions are met once and then are no longer met.</p>


### About Level and Edge Operations

In the level operation, the trigger conditions are assumed to be met only if they are met when the [START] key is pressed (after the timer reaches the set time).

In the edge operation, the trigger conditions are assumed NOT to be met even if they are met when the [START] key is pressed (after the timer reaches the set time).

The trigger conditions are assumed to be met only if they are no longer met and then are met again.

Example) If the mode is Rising

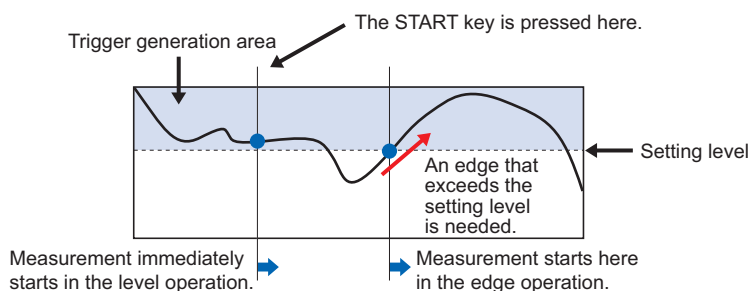


#### Important


There is an error of  $\pm 1\%$  at the maximum to the range between the trigger setting level and the level at which the trigger is actually generated (trigger generation level), e.g.  $\pm 0.01V$  in the 1V range. Approx. 1.3% of trigger hysteresis is provided to the trigger generation level. Approx. 0.5% of alarm hysteresis is provided.

## About the Trigger and Alarm Operations


- H : A trigger/alarm is generated when the signal input rises to (or exceeds) the specified level.

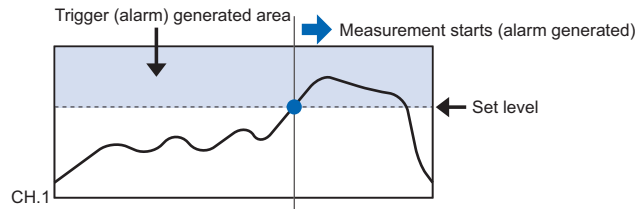


- L : A trigger/alarm is generated when the signal input falls to (or falls below) the specified level.

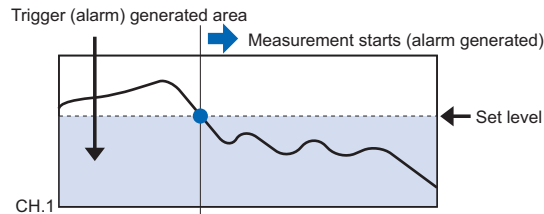

- Win In : Used to specify the upper and lower limits for each channel. When the signal level goes within (or is within) either limit, a trigger/alarm is generated.

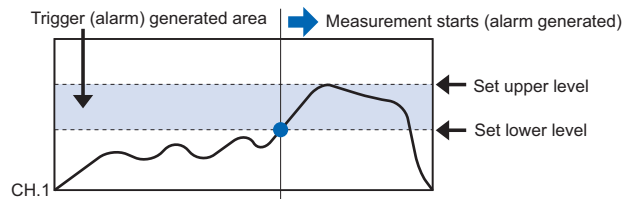

- Win Out: Used to specify the upper and lower limits for each channel. When the signal level goes outside (or is outside) either limit, a trigger/alarm is generated.

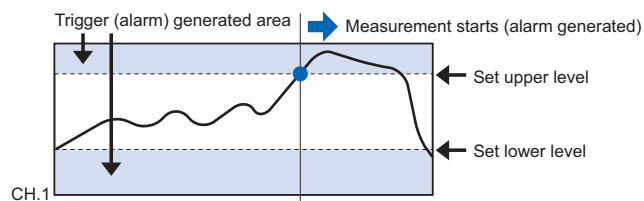

### Note

Alarm judgment interval is 5ms.

Since the alarm judgment and data capture are asynchronous each other, a deviation occurs between captured data and alarm output as follows:

- When the sampling interval is slower than 5ms: a deviation of up to 1 point
- When the sampling interval is faster than 5ms: a deviation of up to 500 points (it varies depending on the sampling interval)

The alarm is cleared once at the start of data capture, and then compared at 5-ms intervals.


When an alarm is generated upon start, the first few data\*1 becomes "L" (status in which no alarm is generated).

\*1: The number of data showing "L" may vary depending on the sampling interval.



## (4) OPT Settings

This menu is used to specify conditions for PC connection and USER settings for switching between users. The USER settings allow you to read out the stored setting conditions easily by switching between users.

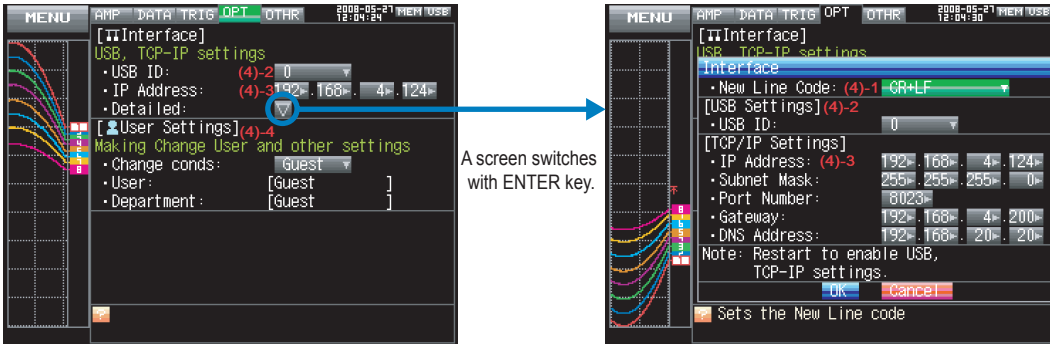

Setting	Selections available	
USB ID	0 to 9	
IP Address	0 to 255. 0 to 255. 0 to 255. 0 to 255	
Detailed Settings	New Line Code	CR+LF, LF, CR
	USB ID	0 to 9
	IP Address	0 to 255. 0 to 255. 0 to 255. 0 to 255
	Subnet Mask	0 to 255. 0 to 255. 0 to 255. 0 to 255
	Port Number	1024 to 65535
	Gateway	0 to 255. 0 to 255. 0 to 255. 0 to 255
	DNS Address	0 to 255. 0 to 255. 0 to 255. 0 to 255
Setting Condition Switching	Guest, User 1, User 2	
User	Text input (when User is set)	
Department Name	Text input (when User is set)	

### (4)-1 End-of-Line Character

Specifies a New Line code used when controlling with the I/F command.

Selection	Description
CR+LF	Starts a new line with CR+LF codes.
LF	Starts a new line with LF code.
CR	Starts a new line with CR code.

### (4)-2 USB Setting

Sets the USB ID number of the ZR-RX70.

Specify a number from 0 to 9.

When you control more than one unit of the ZR-RX70 with one PC, assign a unique USB ID to each of them.

#### Important

You must restart MT100 after any change is made to a setting value.

Changes are applied upon restart.

### (4)-3 TCP-IP Settings

Specifies TCP-IP settings used to connect the ZR-RX70 to an Ethernet.

#### Important

You must restart MT100 after any change is made to a setting value.

Changes are applied upon restart.

Setting items	Description
IP Address	Sets the IP address of MT100 (0 to 255. 0 to 255. 0 to 255. 0 to 255).
Subnet Mask	Sets the IP subnet mask of MT100 (0 to 255. 0 to 255. 0 to 255. 0 to 255).
Port Number	Sets the port number of MT100 (1024 to 65535).
Gateway	Sets the gateway of MT100 (0 to 255. 0 to 255. 0 to 255. 0 to 255).
DNS Address	Sets the DNS address of MT100 (0 to 255. 0 to 255. 0 to 255. 0 to 255).

### (4)-4 USER Settings

Setting items	Description
User	Specifies the user name. You cannot set this item when Guest is selected.
Department name	Specifies the department name. You cannot set this item when Guest is selected.
Change Conds	Switches between Guest, User 1, and User 2. Since setting conditions are stored for each user, they can be called up easily by simply switching the user.

## (5) OTHR Settings

Other miscellaneous settings are made here.



Setting	Selections available		
LCD Brightness	Light, Medium, Dark		
Screen Saver	Off, 10, 30 (sec.); 1, 2, 5, 10, 30, 60 (min.)		
Power On Start	Disable, Enable		
Room Temp.	Internal, External		
Temp. Unit	°C, °F		
Background color	Black, White		
Start/Stop Confirmation Message	On, Off		
Date/Time	Date/Time	Date	January 1, 2005 to December 31, 2035
		Time	00:00:00 to 23:59:59 (Hour:Minute:Second)
		Network Time	Off, On
		Time Server	Text Input
		Time Zone	-12:00 to +13:00 (one-hour steps)
		Synchronized Time	00:00 to 23:59 (Hour:Minute)
		Synchronization Mode	Immediately, Gradually
		Connection Test	▷ Execute
Language	Japanese, English (US), English (UK), French, German, Chinese, Korean		
Return to Default Settings	▷ Execute		
Demo Waveform Mode	Off, On		
Game	Memory test game, Number order game, Reversi, Blackjack, Speed...		
Information	▽ Show Information		

### (5)-1 LCD Brightness

Sets the brightness of the LCD backlight.

### (5)-2 Screen Saver

Automatically turns off the display if the ZR-RX70 is not operated within a specified interval.

Turning off the display frequently using the screen Saver function allows longer lifetime of the LCD screen.

### (5)-3 Power On Start

Sets the feature that automatically starts measurement when the ZR-RX70 is powered on.

Selection	Description
Disable	Disables the Power On Start function.
Enable	Enables the Power On Start function.

### (5)-4 Room Temp. Compensation

Specifies the room temperature compensation in temperature measurement using a thermocouple.

Selection	Description
Internal	The ZR-RX70's room temperature compensation settings are used. (Usually you use this parameter.)
External	Set this parameter to use the room temperature compensation settings in external devices.

### (5)-5 Temp. Unit

Toggles the temperature unit between °C (Celsius) and °F (Fahrenheit). (Selecting °F forcibly enables the scaling function.)

When °F (Fahrenheit) is selected, the calculation formula is as shown below.

$$^{\circ}\text{F (Fahrenheit)} = ^{\circ}\text{C (Celsius)} \times 1.8 + 32$$

Accuracy is calculated using the formula; Accuracy at Celsius x 1.8.

### (5)-6 Background Color

Sets the background color of the waveform and digital display areas.

### (5)-7 Start/Stop Confirmation Message

Specifies the setting of the confirmation message displayed when data capture is started and stopped.

Selection	Description
On	Enables the confirmation message. Pressing the [START/STOP] key brings up the message, confirming whether you want to start (or stop) data capture. Pressing the Enter key starts (or stops) data capture.
Off	Disables the confirmation message. Pressing the [START/STOP] key immediately starts (or stops) data capture without displaying the message.

### (5)-8 Date/Time

Sets the clock of the ZR-RX70.

Sets the built-in clock (Date/Time) of the ZR-RX70. If Network Time is set, the clock of the ZR-RX70 is automatically adjusted via the network. For details, see "Network Time Settings" p. 79.

### (5)-9 Language

Sets the ZR-RX70's display language.

### (5)-10 Demo Waveform Mode

Displays demo waveforms without analog signal input.

Selection	Description
Off	Do not display demo waveforms.
On	Display demo waveforms.

### (5)-11 Return to Default Settings

Initializes the settings. After initialization, the settings are reset to the factory defaults.

**(5)-12 Game**

Games are available. The score is stored for each user.

**(5)-13 Information**

Displays system information for the ZR-RX70.

## Network Time Settings

The ZR-RX70 synchronizes the time of the built-in clock with that of a time server via an Ethernet.



Setting	Description
Network Time	Enables or disables this feature. Off: Disables this feature. The time adjustment is not performed. On: Enables this feature. The time adjustment is performed.
Time Server	Specifies the domain name of the time server to be used.
Time Zone	Sets the time zone of the area in which the ZR-RX70 is to be used (Japan: +09:00).
Synchronized Time	Sets the time at which the ZR-RX70 clock is to be synchronized with the time server. When the setting time comes, the synchronization operation in the local country is performed with a method specified in Synchronization Mode.
Synchronization Mode	Immediately, Gradually Sets a method in which the clock is to be synchronized with the time server. Immediately: Immediately synchronizes the clock with the time server when the time for synchronization comes. Gradually : Does not immediately synchronize the clock when the time for synchronization comes. Gradually synchronizes the clock with the time server. The adjusted length of time is about 43 seconds per day (approximately equal to 10 ms per 20 seconds).
Connection Test	Performs a connection test by connecting to the time server. After the connection test is performed, a message is displayed. If connection fails, check the settings and conduct the connection test again. If the connection test is a success, the following message is displayed.


**Important**

The synchronization is not performed if the error with the time server is 500 ms or more.

The synchronization accuracy with the time server is approx. 10ms. (It may exceed 10ms in some network environments.)


## (6) FILE Menu

Performs file-related operations. The items displayed vary depending on the operation mode.

 File replay is explained in detail on p.54.

When the data in the internal RAM is being replayed, "Next File" and "Previous File" are not displayed.

<Free Running>

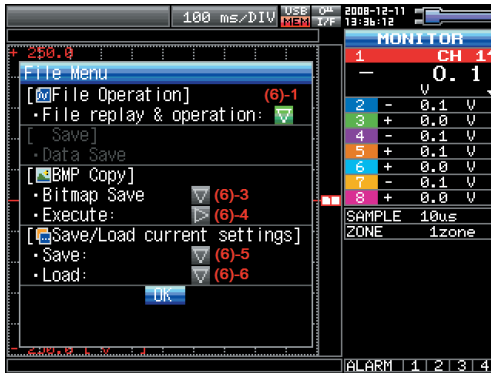

<Replaying>




<Capturing/Capturing and Replaying>



<Auto Saving>



<X-Y Display Screen>

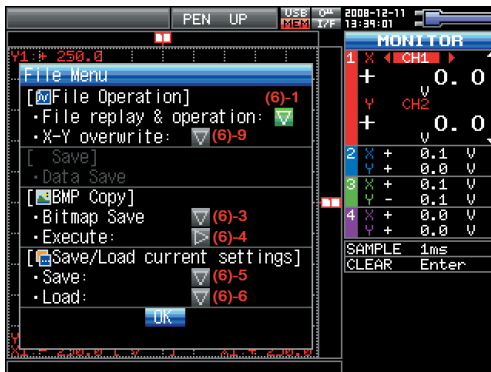

### (6)-1 File Replay and Operation

Replay data or operate files in the internal flash memory or USB memory.

 File replay is explained in detail on p.85.


## (6)-2 Data Save



Save data remaining in the internal RAM to the internal flash memory or USB memory.

<If the Name Type is Auto>

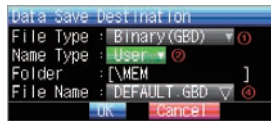

<If the Name Type is User>



Setting	Description
(1) File Format	<p>Sets the file format in which you want to save data.</p> <p>GBD : Creates a data file in Omron proprietary binary format. * Prevents tampering of data.</p> <p>CSV : Creates a data file in a text format. * Cannot be replayed on the ZR-RX70.</p>
(2) Name Type	<p>Sets how a data file is named.</p> <p>Auto : Automatically gives a name to a file. Example: 20050101-123456_UG.GBD Number part.....Date and time at which a file was created * In this example, the date is January 1, 2005 and the time is 12:34:56.</p> <p>UG .....User number for data capture UG (Guest) U1 (User 1) U2 (User 2)</p> <p>GBD.....Data format GBD (Binary format) CSV (Text format)</p> <p>User : Captures data to a file with a user-defined name.</p>
(3) Folder	<p>Specifies a folder to which you want to save data.</p> <p> For details, see the file box on p.85.</p>
(4) File	<p>Specifies a file to which you want to save data.</p> <p> For details, see the file box on p.85.</p>

### (6)-3 Bitmap Save

The ZR-RX70 can save a screen copy of waveforms, etc. to a bitmap file. This menu is used to specify the save destination, file name, etc. of a bitmap file.

<If the Name Type is Auto>



<If the Name Type is User>



Setting	Description
(1) Folder	Specifies a folder to which you want to save data. For details, see the file box on p.85.
(2) File	Specifies a file to which you want to save data. For details, see the file box on p.85.
(3) Name Type	Sets how a data file is named. Auto : Automatically gives a name to a file. Example: 20050101-123456_UG.GBD Number part.....Date and time at which a file was created * In this example, the date is January 1, 2005 and the time is 12:34:56. UG .....User number for data capture UG (Guest) U1 (User 1) U2 (User 2) BMP .....Data format (Bitmap file) User : Captures data to a file with a user-defined name.
(4) Screen Type	Selects the type of the screen to be saved. Full screen: Saves the entire screen currently displayed. This type cannot be used for X-Y overlay. Waveform screen: Saves the waveform display area only (the digital display area is not displayed). To use X-Y overlay in the X-Y Display screen, select this screen type.

### (6)-4 Execute

Save a screen copy to a bitmap file.

For information on specifying the save destination, see “(6)-3 Bitmap Save” p. 82.



### (6)-5 Save

Save the settings of the ZR-RX70.

<If the Name Type is Auto>



<If the Name Type is User>



Setting	Description
(1) Folder	Specifies a folder to which you want to save data. For details, see the file box on p.85.
(2) File	Specifies a file to which you want to save data. For details, see the file box on p.85.
(3) Name Type	Sets how a data file is named. Auto : Automatically gives a name to a file. Example: 20050101-123456_UG.GBD Number part.....Date and time at which a file was created * In this example, the date is January 1, 2005 and the time is 12:34:56. UG .....User number for data capture UG (Guest) U1 (User 1) U2 (User 2) CND.....Data format (Settings file format of the ZR-RX70) User : Captures data to a file with a user-defined name.

### (6)-6 Load

Loads the settings of the ZR-RX70 from a file.



Setting	Description
(1) Folder	Specifies a folder to which you want to save data. For details, see the file box on p.85.


### (6)-7 Next File, Previous File

Replays the previous or next file of the file being currently replayed.

The file order corresponds to the file display order set in the File Replay and Operation ("ascending order of name," "descending order of name," "ascending order of created date and time," or "descending order of created date and time" can be specified).

This function allows search one folder above.

<File Tree Structure (image)>

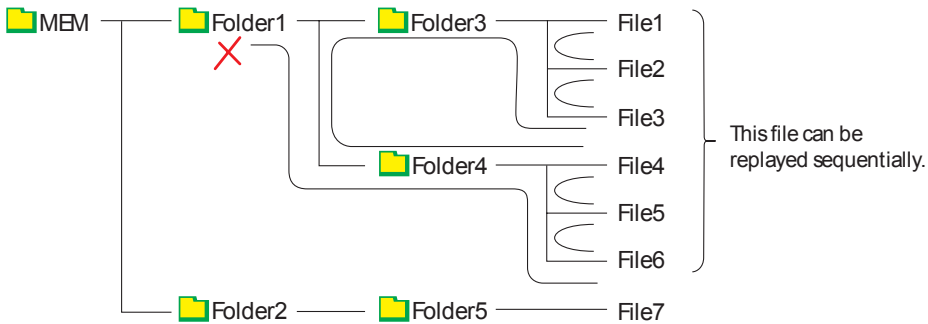

### (6)-8 Stop Auto Save

Stops the auto save process being currently performed. The file to which any data has been already written until stop will be retained.


### (6)-9 X-Y Overwrite

Overwrite the X-Y image on a thumbnail-size image of the captured data in the X-Y Display screen as a background. This overwrite function enables waveform comparison.

**Note**

A thumbnail-size image is automatically generated when the data capture destination is the internal flush memory or USB memory and saved in the same folder as the captured data (the file format is BMP file).

 Also, the waveform screen saved to a bitmap file during replay can be used for overwrite.



Setting	Description
(1)Image Selection	Selects the image to overwrite. The method for selecting an image file is the same as for selecting data to replay.  <b>Important</b> You cannot use the bitmap file saved by specifying Full screen for overwrite.
(2) Overwrite Clearing	Clear the overwritten image. When you do this operation during Free Running, all images will be cleared. When you do this operation during replay, the image of the data currently being replayed is retained.

**Important**


Irregularity may occur on the X-Y screen depending on setting conditions such as high sampling interval. Even in that case, the captured data itself will not be affected.

You can save the image replayed from the captured data in a bitmap file as the waveform image and use it as source image for comparison.

## (7) File Box

Use the file box to specify a data save destination from the DATA menu or to replay and operate data from the FILE menu.

<File box for Data Replay and Operation>

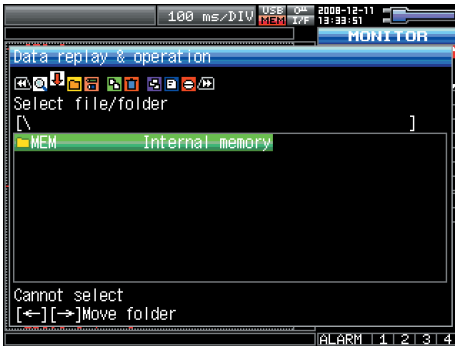

Key	Description
	Change the operation of the file box. <ul style="list-style-type: none"> <li> Show properties ..... Displays details of a file or folder.</li> <li> Select file/folder ..... Selects files or folders to write data.</li> <li> Create new folder ..... Creates a new folder.</li> <li> Create new file ..... Creates a new file.</li> <li> Rename ..... Changes the file or folder name.</li> <li> Copy file/folder ..... Copies files or folders.</li> <li> Select file to copy/delete ..... Selects the file to copy or delete.</li> <li> Select copy destination and copy .. Selects the copy destination and copies.</li> <li> Delete file/folder ..... Deletes files or folders.</li> <li> File sort order..... Changes the order in which files are displayed.</li> <li> View setting..... Changes displaying information for files.</li> <li> Format disk ..... Formats the disk.</li> </ul> * Details of allowed operation will depend on the operation target.
	Moves between folders. ◁: Move up one folder. ▷: Move down one folder.
ENTER	Finalizes the operation.
QUIT	Closes the file box.

<Setting example>


The following shows an operation example for creating a “TEST” folder as the save destination and automatically saving captured data into it.




In the [Data Save Destination], choose [Folder] and press the [ENTER] key.



Use the ▷ key to move to the target folder.

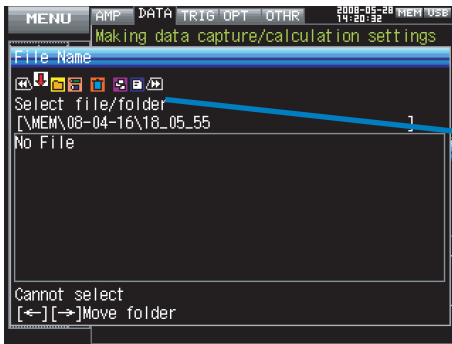


Use the ▷▷ key to select [Create new folder].

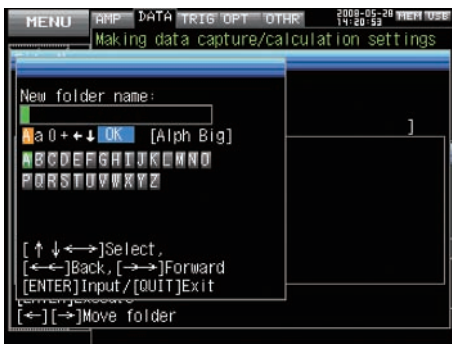


Press the [ENTER] key.

In the [New folder name] box that appears, type in “TEST”.

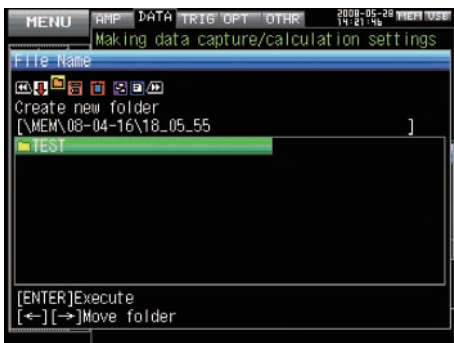

Use the  $\leftarrow$   $\rightarrow$  key to choose [Select file/folder].

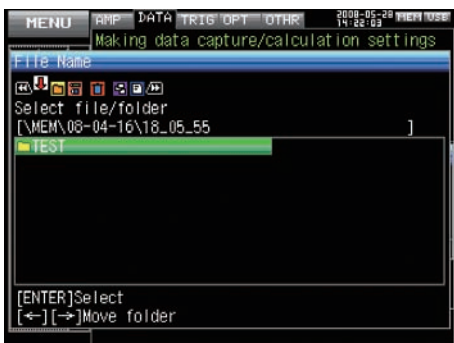


Use the  $\nabla$   $\triangle$  key to move the cursor to the created "TEST" folder, and press the [ENTER] key.



Select [OK] to close the screen.

## (8) Text Input

This menu is used to specify the settings of text input operations such as annotation, EU (scaling) unit and captured data file name input.

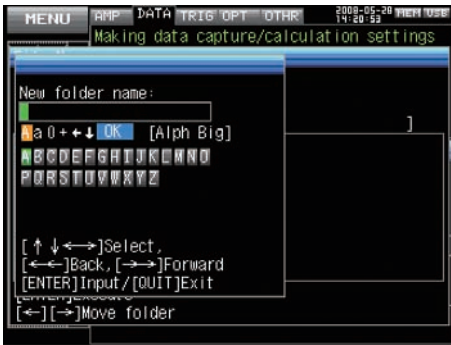

- Operation

Operation mode	Description	Operation method	
Text input	A	Upper case alphabet mode	When the cursor key is moved to the uppermost part, operation can be selected using the left/right key. After selecting an operation, use the down key to move the cursor to the desired character.
	a	Lower case alphabet mode	
	0	Numeric mode	
	+	Symbol mode	
	←	Delete mode	
	↓	Insert mode	
	OK	Finalize mode	
When selecting operation	Text used for each operation	When you bring the cursor to a character and press ENTER, the character is entered. After you finish entering characters, move the cursor to OK and then press ENTER.	

## (9) Data Replay Menu

When you press the [MENU] key during replay, the Data Replay Menu is displayed.



Setting		Selections available	
Cursor Position	Move to First Data	▷ Execute	
	Move to Last Data	▷ Execute	
	Move to Center	▷ Execute	
	Move to Trigger Position	▷ Execute	
	Move to Method Position	Time	
	Selected Position	[Position] Move to	From 0 to Last Data For example, the position is up to 9999 ms if the sampling interval is 1 ms, the data capture destination is the internal RAM, and the number of capture points is 10000.
		[Time] Date	From the date of First Data to the date of Last Data
	Time	From the time of First Data to the time of Last Data	
Cursor Sync		Off, On	
Data Search	Level Combination	Edge OR, Edge AND	
	Settings	Mode	Analog: Off, ↑ H, ↓ L, Win In, Win Logic: Off, ↑ H, ↓ L Pulse: Off, ↑ H, ↓ L, Win In, Win Out
		Level	Numeric value setting
		Alarm CH	Off, Output 1, Output 2, Output 3, Output 4
		Alarm CH mode	↑ Rising, ↓ Falling
	Next Search	▷ Execute	
Prev. Search	▷ Execute		
Statistical Calculation between Cursors	Execute	▷ Execute	
X-Y Display Settings	X-ch	CH1 to CH8	
	Y-ch	CH1 to CH8	
	Trace	Off, On	
Execute X-Y for All Data		▷ Execute	
Execute X-Y between Cursors		▷ Execute	

### (9)-1 Move to First Data

Moves the currently selected cursor (A or B) to the start of the data.

### (9)-2 Move to Last Data

Moves the currently selected cursor (A or B) to the end of the data.

### (9)-3 Move to Center

Moves the currently selected cursor (A or B) to the center of the data.

### (9)-4 Move to Trigger Position

Moves the currently selected cursor (A or B) to the trigger position.

### (9)-5 Move to Selected Position

Moves the currently selected cursor (A or B) to a selected position (relative position in time) or a specific point in time.

<If the Method is Position>



<If the Method is Time>



Setting	Selections available
(1) Method	Sets the method for specifying the moving destination. Either Position or Time can be selected.
(2) Position	Sets the moving destination as a relative position. Specify how much later the cursor should be moved from the capture start assumed as 0. Only a point up to the end of data can be specified. Check the setting range in the (A) part. * In the example in this figure, the sampling interval is 1 ms, the data capture destination is the internal RAM, and the number of capture points is 20000. Since the first point of data is 0 ms, only a position up to 19999 ms can be set.
(3) Time	Sets the moving destination as a date and time. Only a point between the start and the end can be set. Check the setting range in the (B) part.

### (9)-6 Cursor Sync


Sets a function that moves the two cursors simultaneously when you move them.

Selection	Description
Off	The two cursors are not synchronized. Only the specified cursor moves.
On	The two cursors move in synchronization. Cursor A is always the fulcrum.



### (9)-7 Level Settings

The Level Settings are the same as the Trigger Level Settings except that the Combinations include only edge operations (and no level operation) and the Alarm Output can be set to Rising (from Cleared to Generated) and Falling (from Generated to Cleared).

 See the "Trigger Level Settings/Alarm Level Settings" p. 72. This section describes only how to specify the Alarm Output.



Setting	Selections available
(1) Alarm CH	Sets the alarm output to be used for search. Off: No alarm output is used for search. Output 1 to Output 4: The specified output is used for search.
(2) Mode	Sets the search mode. ↑ Rising : Finds an edge at which the alarm output changes from Cleared to Generated. ↓ Falling : Finds an edge at which the alarm output changes from Generated to Cleared.

### (9)-8 Next Search

Moves the cursor to a position after the current cursor position where the search conditions are met (Set the search conditions in Section (9)-7 Level Settings).

### (9)-9 Prev. Search


Moves the cursor to a position before the current cursor position where the search conditions are met (Set the search conditions in Section (9)-7 Level Settings).

### (9)-10 (Calculation) Execute

Performs calculation between cursors. Opens a window and displays calculation results when Execute is selected.

For calculation results, see the table below. Press the [FILE] key to open the window to save the statistical calculation results. Specify a save destination and select the OK key to save the statistical calculation results in text format (CSV).

The method for specifying the save destination and file name is the same as for specifying the captured data file.

 For details, see p.85.


	Average	Max	Min	P-P	RMS	
1	+ 0.0	+ 0.1	+ 0.0	+ 0.2	+ 0.0	V
2	+ 0.0	+ 0.0	- 0.1	+ 0.1	+ 0.0	V
3	+ 0.0	+ 0.0	- 0.1	+ 0.1	+ 0.0	V
4	+ 0.0	+ 0.0	- 0.1	+ 0.2	+ 0.0	V
5	- 0.1	+ 0.0	- 0.2	+ 0.2	+ 0.1	V
6	+ 0.0	+ 0.0	- 0.1	+ 0.1	+ 0.0	V
7	+ 0.0	+ 0.0	- 0.1	+ 0.1	+ 0.0	V
8	+ 0.0	+ 0.0	- 0.2	+ 0.2	+ 0.1	V



Selection	Description
Off	Calculation is not performed.
Average	Displays the simple average value of data being captured.
Max	Displays the maximum value of data being captured.
Min	Displays the minimum value of data being captured.
Peak	Displays the peak value of data being captured.
RMS	Displays the effective value of data being captured. The calculation formula is as shown below. $R.M.S = \sqrt{\sum D^2/n}$ * D: data    n: number of data

### (9)-11 X-Y Display Settings

The ZR-RX70 can convert waveform data to X-Y display. This menu is used to assign channels and make other settings to convert the data to X-Y display.

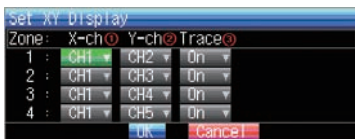

Setting	Selections available
X-ch	Sets a channel to be assigned to the X-axis in each zone.
Y-ch	Sets a channel to be assigned to the Y-axis in each zone.
Trace	Turns on or off the display in each zone. On: Turns on the display of waveforms. Off: Turns off the display of waveforms in this zone.

### (9)-12 Execute X-Y for All Data


Converts all the replay data to X-Y display when executed.

### (9)-13 Execute X-Y between Cursors

Converts only the data between Cursors A and B to X-Y display when executed.



## (10) NAVI Menu

The NAVI menu can be displayed in three modes, Free Running, Recording, and Replay.

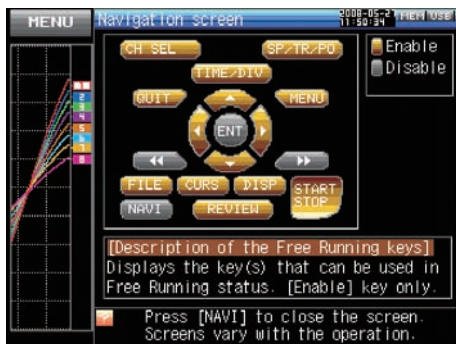

Operation	Description
Open	Press the [NAVI] key to open the NAVI menu.
Close	Press the [NAVI] key to close the NAVI menu.
Browse explanation	Explanation is displayed when an enabled key is pressed.

## (11) Quick Settings

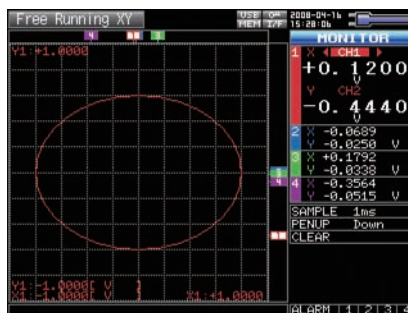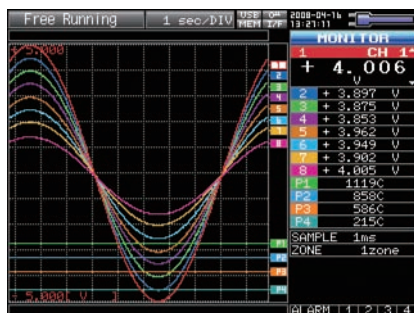

Screen	Operation mode	Content	Explanation
Waveform	Free Running	SAMPLE	◀▶ key can be used to change the sampling interval.
		ZONE	◀▶ key can be used to change the zone division.
	Recording	ZONE	◀▶ key can be used to change the zone division.
	Capturing and Replaying	ZONE	◀▶ key can be used to change the zone division.
	Replaying	SERCH	◀▶ key can be used to perform search. ◀: Searches the past side. ▶: Searches the future side.
X-Y	Free Running	ZONE	◀▶ key can be used to change the zone division.
		CLEAR	Press the ◀ or ▶ key to clear the waveforms on the screen.


## (12) Canceling Key Lock with Password

A password can be set to ZR-RX70 to cancel the key lock.

(No password is set at factory default.)

<Operation flow>

### 1 Set the password.

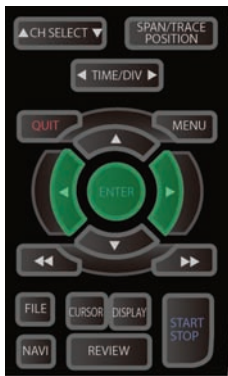

Press the  $\triangleleft$ ,  $\triangleright$ , and [ENTER] keys at the same time to display the password setting screen shown below. Specify a 4 digit password.



Use the  $\triangleleft$ ,  $\triangleright$ ,  $\triangleup$ ,  $\triangledown$ , keys to select numbers. Press the [ENTER] key to confirm the password.

Specifying 0000 will disable password operation.

In case you forgot your password, please contact us to acquire the master password.

### 2 Set the key lock.

Hold down the  $\triangleleft\triangleleft$  and  $\triangleright\triangleright$  keys together for at least two seconds.

### 3 Cancel the key lock.

Hold down the  $\triangleleft\triangleleft$  and  $\triangleright\triangleright$  keys together again for at least two seconds.

The password setting screen shown below will be displayed. Set a password.



Entering an incorrect password will not cancel key lock.

Key lock state will be retained when power is turned off.


# X-Y Measurement Example

## Example 1: Measure the CH1 for X-axis and the CH2 for Y-axis.


Measurement examples when specifying CH1 for X-axis and CH2 for Y-axis are described below.

Only the X-Y channel 1 is displayed with orange line.

- 1 Press the [DISPLAY] key three times to open the X-Y Display screen.

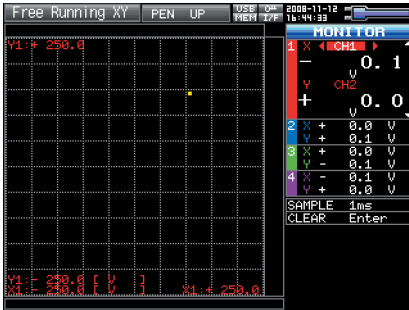


- 2 Press the [TIME/DIV] key ( $\Delta$ ) several times to make the line color of X-Y channel 1 to orange.

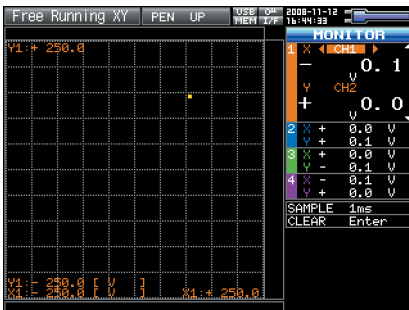


### Note

You can set the colors of the waveforms (colors of X-Y channels) displayed on the X-Y Display screen, but not change those on the Y-T screen.


- 3 Press the [SPAN/TRACE/POSITION] key three times to select the TRACE.

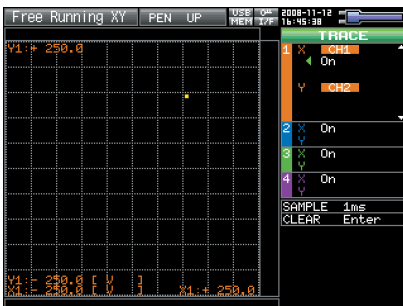

**4** Press the [CH SELECT] key to move the cursor to the X-Y channel 2.

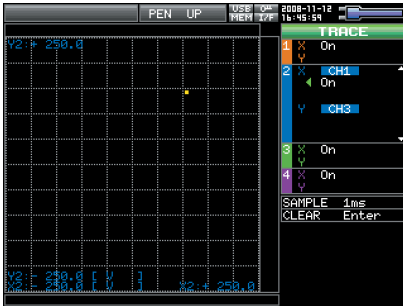

**5** Press the key to change the TRACE to OFF.

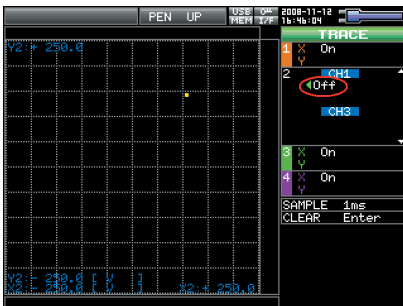


**6** Repeat steps **4** and **5** in the same manner to change the TRACE for X-Y channels 3 and 4 to OFF.

**7** Clear the screen just in case. Press the [CH SELECT] key to move the cursor to the [CLEAR] and then press the [ENTER] key.


**Note**

The CLEAR serves a similarly function to paper change for the X-Y recorder (dedicated machine). The paperless ZR-RX70 adopts a means of clearing the waveform on the screen instead of changing recording paper.

**8** Press the [QUIT] key to return to the previous display. Capturing is not yet started. Since the pen has been moved up, yellow dots are moving but the path doesn't remain on the screen.

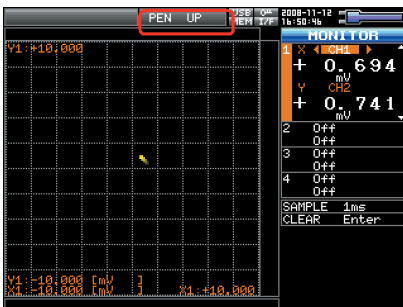

**9** Press the [START/STOP] key to start capturing and move down the pen. The dotted path is displayed.

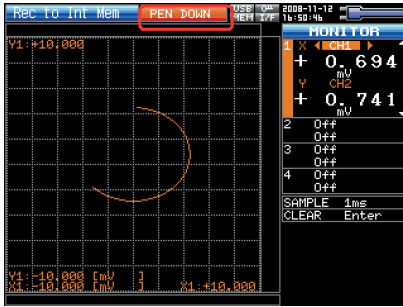

## Example 2: Overlay the data on the previously captured data to compare their waveforms.

The following is the method to compare waveforms by overlaying data on the previously captured one. This is useful when you want to judge pass/fail by waveform comparison.

### Note

This is not the function of pass/fail judgment automatically performed by the ZR-RX70.


- 1 Press the [DISPLAY] key three times to display the X-Y Display screen.
- 2 Call up the past waveform image. Press the [FILE] key.



- 3 Press the  $\nabla$  key to move the cursor over the X-Y overlay image, then press the [ENTER] key.




- 4 Press the [ENTER] key while placing the cursor on the Image Selection key.

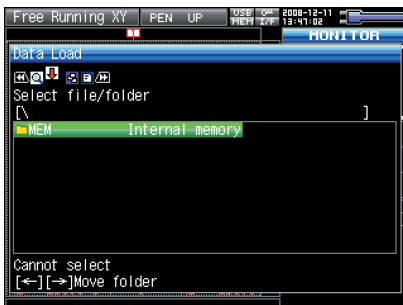




- 5** Move the cursor to the image you want to call up using the  $\triangle$  and  $\nabla$  keys.

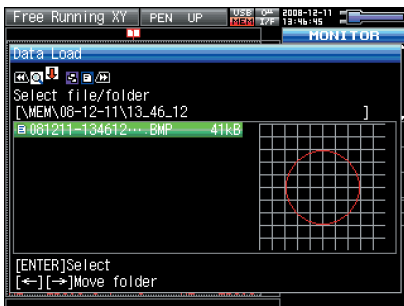


- 6** Press the [ENTER] key to display the image.

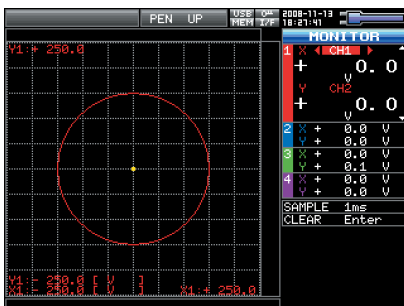

**Note**

You can call up an image (background), not data. Even if you try to change some settings such as SPAN after an image is called up, they are not changed.

- 7** Press the [START/STOP] key to start capturing. The current image of waveforms is overlaid on the past one.

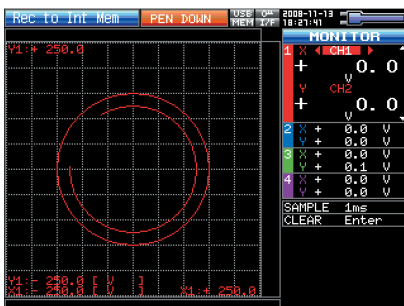

**Note**

At this time, only the current data is in fact captured.

# WEB Server Function

This function allows operating and monitoring ZR-RX70 via a Web browser.

## Supported Web browsers

- Microsoft Internet Explorer 6.0 or later
- Netscape 6.2 or later
- Firefox 1.5 or later
- Opera 9.0 or later

## Available functions using a Web browser

- Operating ZR-RX70
- Monitoring ZR-RX70 display screen
- Enlarging ZR-RX70 display screen
- Linking to FTP
- Linking to our Web site

## Setting the URL

The URL (Uniform Resource Locator) must be correctly set according to your network environment.

Follow the procedure below to access the ZR-RX70.

http://IP address/Index.html

- http ..... Protocol to access the server.  
HTTP (Hyper Text Transfer Protocol)
- IP address ..... Type in the IP address of the ZR-RX70 to monitor.
- Index.html ..... File name. This is fixed to Index.html.

### Note

---


The port number can be omitted. Set 80 to the port number if necessary.

http://IP address:80/index.html


---

## Procedure

- 1 Open the Web browser.
- 2 Type in the URL (<http://IP address/Index.html>) in the address input field.

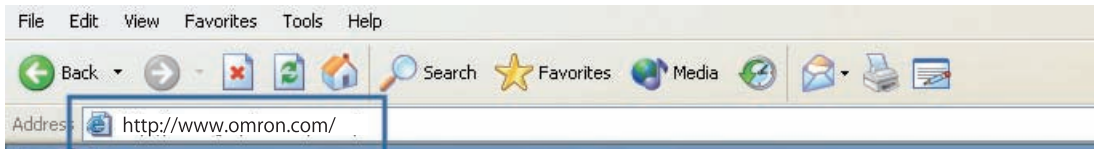

- 3 The following pages are displayed.

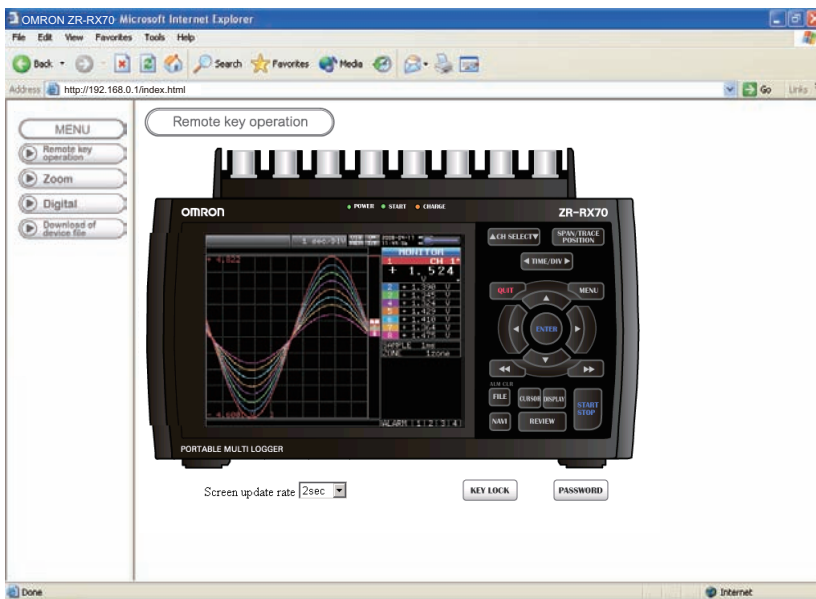

Remote key operation..... Allows ZR-RX70 operation.

Zoom..... Enlarges only the LCD screen of ZR-RX70.

Digital..... Displays the ZR-RX70 measured value digitally.

Download of device file..... Allows data captured with ZR-RX70 to be downloaded to your PC via FTP.

OMRON Web site..... Accesses to our Web site.

## Remote key operation


To operate ZR-RX70 from a remote location, click the corresponding ZR-RX70 panel keys on the screen.



KEY LOCK ..... Sets and cancels key lock.


PASSWORD ..... Sets and cancels the password.

# Zoom

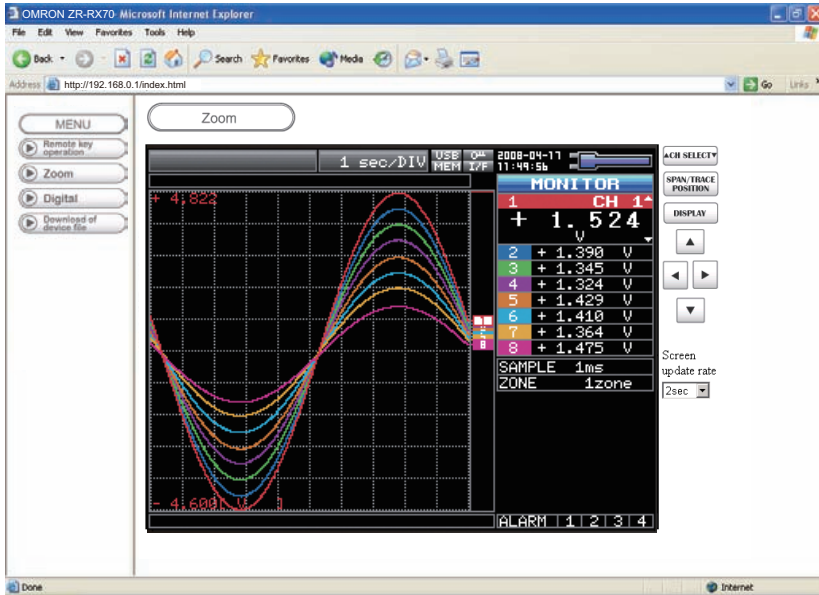

- CH SELECT..... Press this switch to move the active channel in the Waveform + Digital or X-Y screen.
- DISPLAY ..... Switches the display mode.  
Press this key to switch among Waveform + Digital, Expanded Waveform, Digital screens, and X-Y display.
- SPAN/TRACE/POSTION ..... Switches the display in the digital display area.  
Press this key to switch among MONITOR, SPAN, POSITION, and TRACE.
- ◀▶ ▲ ▼ ..... Cursor keys
- Screen update speed..... Specifies the speed in which the screen is updated.  
Available update speeds are 2, 5, and 10 seconds.


## Digital

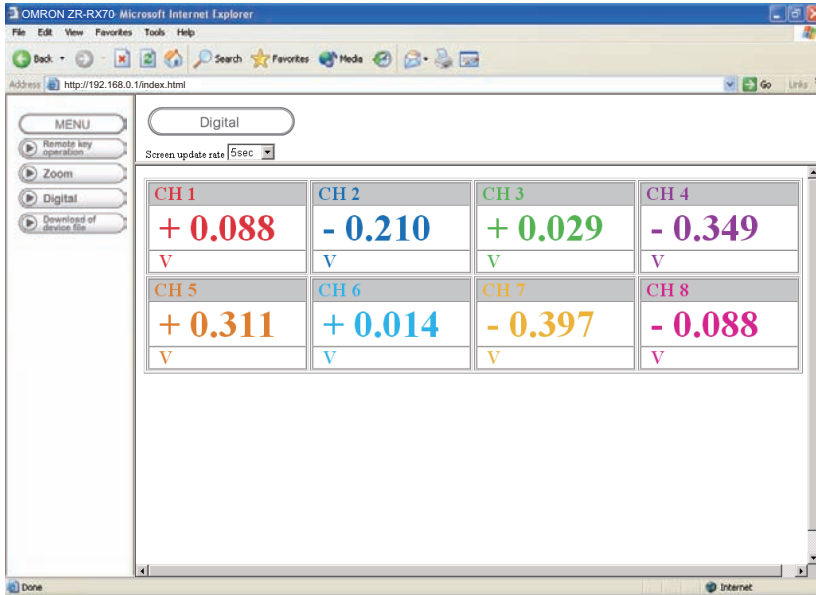

Screen update speed..... Specifies the speed in which the screen is updated.  
Available update speeds are 2, 5, and 10 seconds.

## Download of device file

Allows memory data from ZR-RX70 and data in USB memory to be downloaded to your PC.

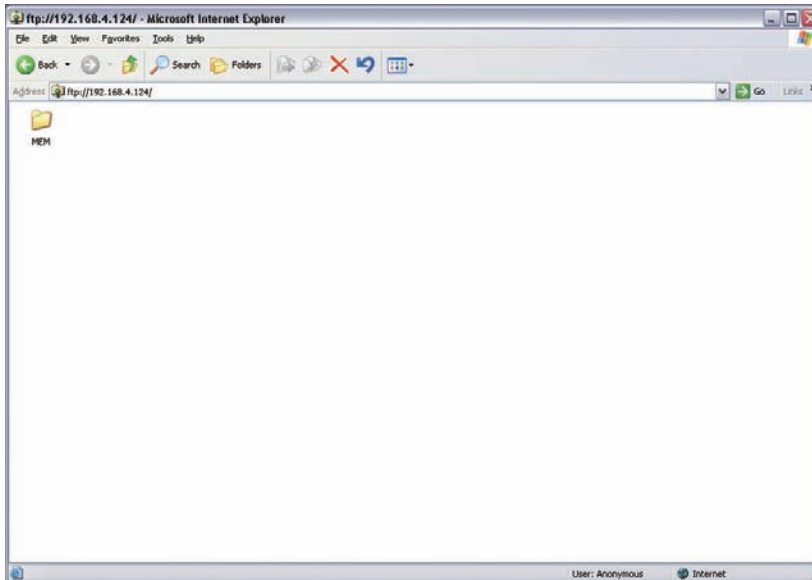

### <About the FTP server function>

When an Internet Explorer FTP connection is used, login is automatically performed using an anonymous account and the files become read-only files.

The following operations cannot be performed for read-only files:


- Upload file
- Delete file/folder
- Create file/folder
- Change file name/folder name

To enable data to be written to the ZR-RX70, the login account name must be changed. Please use the following table as a guide.

Account name	Password	Restrictions
RX70	None	None
rx70	None	None
Anonymous	Any	Read-only

The following procedure is used to change the Internet Explorer login account.

Go to the [File] menu and select [Login As...] to open the [login As] dialog box.

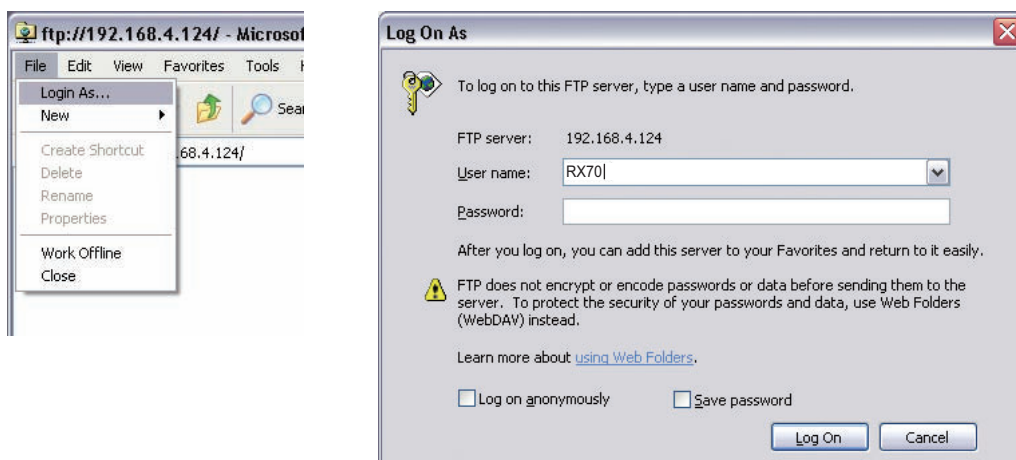

Enter the account name in the User Name box. leave the Password box blank.

Finally, click the "Login" button.

MEMO



# SPECIFICATIONS

---

This chapter describes the basic specifications for the ZR-RX70.

<b>Standard Specifications</b>	<b>108</b>
<b>Accessory/Option Specifications</b>	<b>113</b>
<b>External Dimensions</b>	<b>115</b>

# Standard Specifications

## Standard Specifications

Item		ZR-RX70A	
Analog input section	Input method	All channels isolated input, Imbalanced input, Simultaneous sampling of all channels	
	Input terminal shape*1	BNC terminal: For volate measurement M3 screw type terminal: For voltage/temperature (termocouples) measurement	
	Number of input channels	8 CH	
	Maximum sampling speeds	10 $\mu$ s	
	A/D resolution	16 bit	
	Measurement ranges	Voltage	20, 50, 100, 200, 500 mV, 1, 2, 5, 10, 20, 50, 100, 200, 500 V, 1-5 V F.S.
		Temperature (Thermocouples)	K, J, E, T, R, S, B, N, W (WRe5-26)
		Humidity*2	0 to 100% (Voltage 0 to 1 V scaling conversion)
	Maximum input voltage	between +/- input terminals	20 mV to 1 V: $\pm$ 30 VDC 2 V to 500 V: $\pm$ 500 VDC
		between input channel - terminals	60 Vp-p
		between input channel - terminal/GND	60 Vp-p
	Reference contact compensation accuracy*3	$\pm$ 1.0°C	
	Input impedance	1 M $\Omega$ $\pm$ 5%	
	Allowable signal source resistance	1 k $\Omega$ or less	
	Common mode rejection ratio	At least 90 dB (50/60 Hz: signal source 300 $\Omega$ or less)	
	S/N (Noise)	20mV range: At least -40 dB Other range: At least -50 dB	
	Input filter	OFF, Line, 5 Hz, 50 Hz, 500 Hz (Attenuation) -3 dB/6 dB oct	
Withstand voltage	between input channel - terminals	1000 Vp-p (1 minute)	
	between input channel - terminal/GND	1000 Vp-p (1 minute)	
Insulation resistance	between input terminal/GND	At least 50 M $\Omega$ (at DC500 V)	

Item		ZR-RX70A	
External input/output sections	Number of channels*4	Input	Trigger input (1 ch) or External sampling input (1 ch) Logic input 4 CH or Pulse input 4 CH Selection method
		Output	Alarm output 4 CH
	Input specifications	Input voltage range	0 to +24 V (single-ended ground input)
		Threshold voltage	Apporx. +2.5 V
		Hysteresis range	Apporx. 0.5 V (+2.5 V to +3 V)
	Alarm output*4	Output format	Open collector output (5 V, 10 kΩ pull-up resistance) Contact capacity 5 V to 24 V, 100 mA or below
		Output conditions	Level judgement, window judgement, logic pattern judgement, pulse judgement
		Judgement interval	5 ms
	Clock accuracy*5		Network Time Setting Off:
		Network Time Setting On:	±0.01% (accurate within about 8.6 seconds per day) (maximum error after synchronization)
Operating environment		0 to 40°C, 5 to 85 %R.H. (15 to 35°C when the battery is used)	
Power supply*6		AC adapter: AC100 to 240 V/50 to 60 Hz DC input: DC8.5 V to 24 V Battery pack: DC7.4 V (2200 mAh)	
Power consumption (current consumption)	When the AC adapter is used	When the LCD is ON	30 VA (42 VA during battery recharge)
		When the screensaver is operating	25 VA (37 VA during battery recharge)
	At DC24 V input	When the LCD is ON	0.7 A (1.0 A during battery recharge)
		When the screensaver is operating	0.5 A (0.9 A during battery recharge)
Vibration resistance		Equivalent to automobile part Type 1 Category A classification	
External dimensions		232 × 150 × 80 mm	
Weight		Apporx. 1.1 kg (Excluding AC adapter and batteries)	
Accessories		User's Manual (this document), Utility Disk (CD-R), AC adapter/AC cable	

\*1 BNC terminal and M3 screw type terminal of the same channel cannot be used simultaneously.

\*2 when ZR-XRH1 is used (Refer to Options table)

\*3 23°C ± 5°C

At least 30 minutes after the power supply is turned on

Folter Line

GND connection + B54:B84

\*4 A logic alarm cable ZR-XRL1 (optional) is necessary.

\*5 23°C environment

\*6 2 battery packs should be mounted when using battery pack.

# Analog Input Measurement Accuracy

Common to ZR-RX70A

Item	Description		
Voltage	±0.25% of F.S.		
Temperature *1	Thermocouple	Measurement Temperature Range (°C)	Measurement accuracy
	R/S	0 ≤ TS ≤ 100	± 7.0°C
		100 < TS ≤ 300	± 5.0°C
		R: 300 < TS ≤ 1600	± (0.05% of rdg + 3.0°C)
		S: 300 < TS ≤ 1760	± (0.05% of rdg + 3.0°C)
	B	400 ≤ TS ≤ 600	± 5.5°C
		600 < TS ≤ 1820	± (0.05% of rdg + 3.0°C)
	K	-200 ≤ TS ≤ -100	± (0.05% of rdg + 3.0°C)
		-100 < TS ≤ 1370	± (0.05% of rdg + 2.0°C)
	E	-200 ≤ TS ≤ -100	± (0.05% of rdg + 3.0°C)
		-100 < TS ≤ 800	± (0.05% of rdg + 2.0°C)
	T	-200 ≤ TS ≤ -100	± (0.1% of rdg + 2.5°C)
		-100 < TS ≤ 400	± (0.1% of rdg + 1.5°C)
	J	-200 ≤ TS ≤ -100	± 3.7°C
		-100 < TS ≤ 100	± 2.7°C
		100 < TS ≤ 1100	± (0.05% of rdg + 2.0°C)
N	0 ≤ TS ≤ 1300	± (0.1% of rdg + 2.0°C)	
W	0 ≤ TS ≤ 2315	± (0.1% of rdg + 2.5°C)	

- \*1 Operating environment 23°C ± 5°C
- Left for at least 30 minutes after the power supply is turned on
  - Filter Line
  - GND connection
  - Thermocouple used is T:0.32 φ, other:0.65 φ

# Main Functions

Item		ZR-RX70A
Data record	Sampling speeds *1	10, 20, 50, 100, 200, 500 $\mu$ s 1, 2, 5, 10, 20, 50, 100, 200, 500 ms, 1, 2, 5, 10, 20, 30, 60 s, External
	Memory capacity	Internal RAM: Approx. 64 MB SDRAM Internal flash memory: Approx. 256 MB Flash Memory USB memory: No limit (except each file must be within 2GB)
	Memory contents	Setup conditions Measured data Screen copy
	Save destination specification*2	Internal RAM, internal memory or External USB memory
	Setting of memory used for data capture	Set the number of data capture points. Setting range: 10 to 1000000 points Setting unit: In steps of one point
	Pre-trigger	0 to 100% (Set in steps of 10%)
	Auto save function*3	ON or OFF setting ON: Automatically saves the data in the internal RAM to the internal flash memory or USB memory. OFF: Only temporarily retains data in the internal RAM (The data is lost at power-off).
PC Interface	Interface types	Ethernet (10BASE-T/100BASE-TX) USB (USB 2.0 HIGH-SPEED)
	Ethernet functions	Web server function: Displays ZR-RX70 screen image on Web browser and operates ZR-RX70 from the Web browser. FTP server function: Transfers and deletes files from internal memory and USB memory. NTP client function: Corrects the time of internal clock.
	USB functions	A connector: Connection to USB memory B connector: Connection to PC ( Select if controlled by the PC software or USB drive mode.)
	Realtime data transfer speed	1 ms to 60 s
Monitor	Display	5.7 inch TFT color LCD (QVGA: 320 $\times$ 240 dots)
	Display settings	Waveform screen + Digital screen Waveform screen Digital screen + Calculation Display screen X-Y display
	Display languages	Japanese, English, Chinese, Korean, German, French
	Backlight life	50,000 hrs (when brightness is down to 50%), depends on operation environment
	Screensaver function	OFF, ON (10, 30 sec, 1, 2, 5, 10, 30, 60 min)
Calculation functions	EU (scaling function)	Voltage value can be changed to any value (unit) 4 points can be set for each channel.
	Statistical calculation functions*4s	Types of statistical calculation : Average, Max, Min, Peak, RMS Number of operations : Maximum of 2 can be set simultaneously (during data recording), Maximum of 5 can be set simultaneously (during data replay) Method : Data between cursors specified (during data replay)

Item		ZR-RX70A
Other functions	Search functions	Function: Search the captured data for the required number of points Search type: Search of channels by levels Search by logic pulses + combinations Search by alarm generation
	Annotation input function	Function: A comment can be input for each channel. Supported characters: Alphanumeric and kana characters Number of characters: 31 (Up to 8 characters are displayed)
Trigger Functions	Timer mode	Off, Date and Time, Every Day Cycle, Every Hour Cycle
	Repeat trigger	Off, On
	Trigger types	Start: Data capture starts when a trigger is generated. Stop: Data capture stops when a trigger is generated.
	Trigger settings	Start: Off, Level, External, Time Stop: Off, Level, External, Time
	Level judgment modes	Analog: ↑ H, ↓ L, Window IN, Window Out (Tolerance ±1%) Logic: ↑ H, ↓ L Pulse: ↑ H, ↓ L, Window IN, Window Out
	Trigger accuracy	± 1% of the range
	Channel combinations	Level OR, Level AND, Edge OR, Edge AND
Pulse input setting	Revolutions mode	Function: Counts the number of pulses per second and multiplies it by 60 to display an rpm value. Span: 50 100 200 500 1k 2k 5k 10k 20k 50k 100k 200k 500k 1M 2M 5M 10M 20M RPM/F.S.
	Counts mode	Function: Displays a count of the number of pulses for each sampling interval from the start of measurement. Span: 50 100 200 500 1k 2k 5k 10k 20k 50k 100k 200k 500k 1M 2M 5M 10M 20M C/F.S.
	Inst.mode	Function: Counts the number of pulses for each sampling interval. Resets the count value after each sampling interval. Span: 50 100 200 500 1k 2k 5k 10k 20k 50k 100k 200k 500k 1M 2M 5M 10M 20M C/F.S.
	Maximum number of pulse inputs	Maximum input frequency: 50 kHz Maximum number of counts: 15 MC (24-bit counter)
External sampling input		Maximum input frequency : 100kHz Time error : 10µs or less

\*1 A unit in µs and External cannot be selected if the save destination is the internal flush memory or USB memory.

\*2 Neither the internal flush memory nor USB memory can be selected if a unit in µs is selected.

\*3 This function is available only if data is captured to the internal RAM.

\*4 Realtime and between cursors specified (during data replay)

# Accessory/Option Specifications

## PC Software

Item	Special PC software ZR-SX10 Wave Inspire RX (Since Ver 2.3) (Option Specifications)	Standard PC software Smart Viewer RX70 (Since Ver 2.02) (Standard accessories)
Compatible operating system	Windows Vista/XP/2000	
CPU	Intel compatible processor 1 GHz or faster recommended	Pentium 4: 2.0GHz or higher
Memory	<ul style="list-style-type: none"> <li>Windows 2000/XP: 512 MB or more (recommended: 1 GB or more)</li> <li>Windows Vista: 1 GB or more (recommended: 2 GB or more)</li> </ul>	512MB or more (1GB or more recommended)
Display	<ul style="list-style-type: none"> <li>1024 x 768 resolution, or higher</li> <li>16-bit color or higher screen display functions (recommended: 24-bit color or more)</li> </ul>	
Compatible interface	USB, LAN	
Realtime display	Up to 1 ms	
Standard functions	Review saved data, realtime capture of PC data, main unit setup, CSV file conversion	
Waveform operation	Drag & Move waveform directly Batch change of CH scale Intuitive operation by mousewheel	Change CH scales individually by icons
Waveform display	Displays multi-windows Displays all the CH multi-scales simultaneously X-Y display Scrolling for all directions (up, down, right, left)	Split display in the single window X-Y display Meter display selection
Configuration function	Smart Listview setup function Smart Grouping function	Setup in the tab format
External control of sampling	Not available	Available (can set and display)
Captured data	Binary file (original format) : Captured data and the information of graph window are saved. CSV file : Captured data is saved in Comma separated value format. Binary files can be converted to CSV files all at once.	
Sampling period	Binary format: 10 $\mu$ s to 60 s CSV format: Sampling interval 10 ms to 60 s	
Others	Cursor function, Comment input function, FFT display, Excel transfer function	

\*1 When you capture the data by WaveInspire, please finish all the other application software and save captured data to hard disk. Even using the PC which fills enough specification, the capture error occurs at times because the PC is bad condition. (For example, the other application software works, or recording medium has no free area.)

\*2 Don't start up the other application software, as WaveInspire works. And don't work other several operation. (For example, screen saver, virus scan program, copying or moving files, searching file etc.)

# Battery Pack

## ZR-XRB1 (Option Specifications)

Item	Description	
Capacity	7.4 V/2200 mAh	
Running time*	When using the LCD display	Approx. 2 hours
	When using the screensaver	Approx. 2.5 hours
Battery type	Lithium secondary battery	
Charging method	Mount in the main unit (ZR-RX70)	
Time required for charging	When one battery pack is charged: Approx. 4 hours When two battery packs are charged: Approx. 8 hours	
Switchover in the case of a power failure	By using the battery together with the AC adapter, the power supply will be switched automatically to the battery in the event of a power failure.	
Operation environment	15 to 35°C	
Other functions	When the battery is running low, measured data is saved and the file is closed automatically.	

\* When two battery packs are mounted on ZR-RX70. (One sufficient for battery charging)  
When capturing to internal memory at a sampling speed of 1 sec, using new battery packs at +25°C environment.  
The running time depends on the operating environment.


# Humidity Sensor

## ZR-XRH1 (Option Specifications)

Item	Description	
Allowable temperature range	-25 to +80°C	
Allowable humidity range	0 to 100% RH	
Relative humidity measurement accuracy	± 3% RH (5 to 98% RH at 25°C)	
Relative humidity measurement accuracy (5 to 98%)	Measurement environment	Measurement accuracy
	0 to 10°C	±5% RH
	10 to 20°C	±4% RH
	20 to 30°C	±3% RH
	30 to 40°C	±4% RH
	40 to 50°C	±5% RH
	50 to 60°C	±6% RH
	60 to 70°C	±7% RH
	70 to 80°C	±8% RH
Response time	15 sec (90% response when membrane filter is installed)	
Sensor output	0 to 1 V	
Power consumption	Approx. 4 mA	
External dimensions	φ14 mm × 80 mm (excluding cable)	
Cable length	3 m	
Sensor power source	5 to 16 VDC	



# External Dimensions

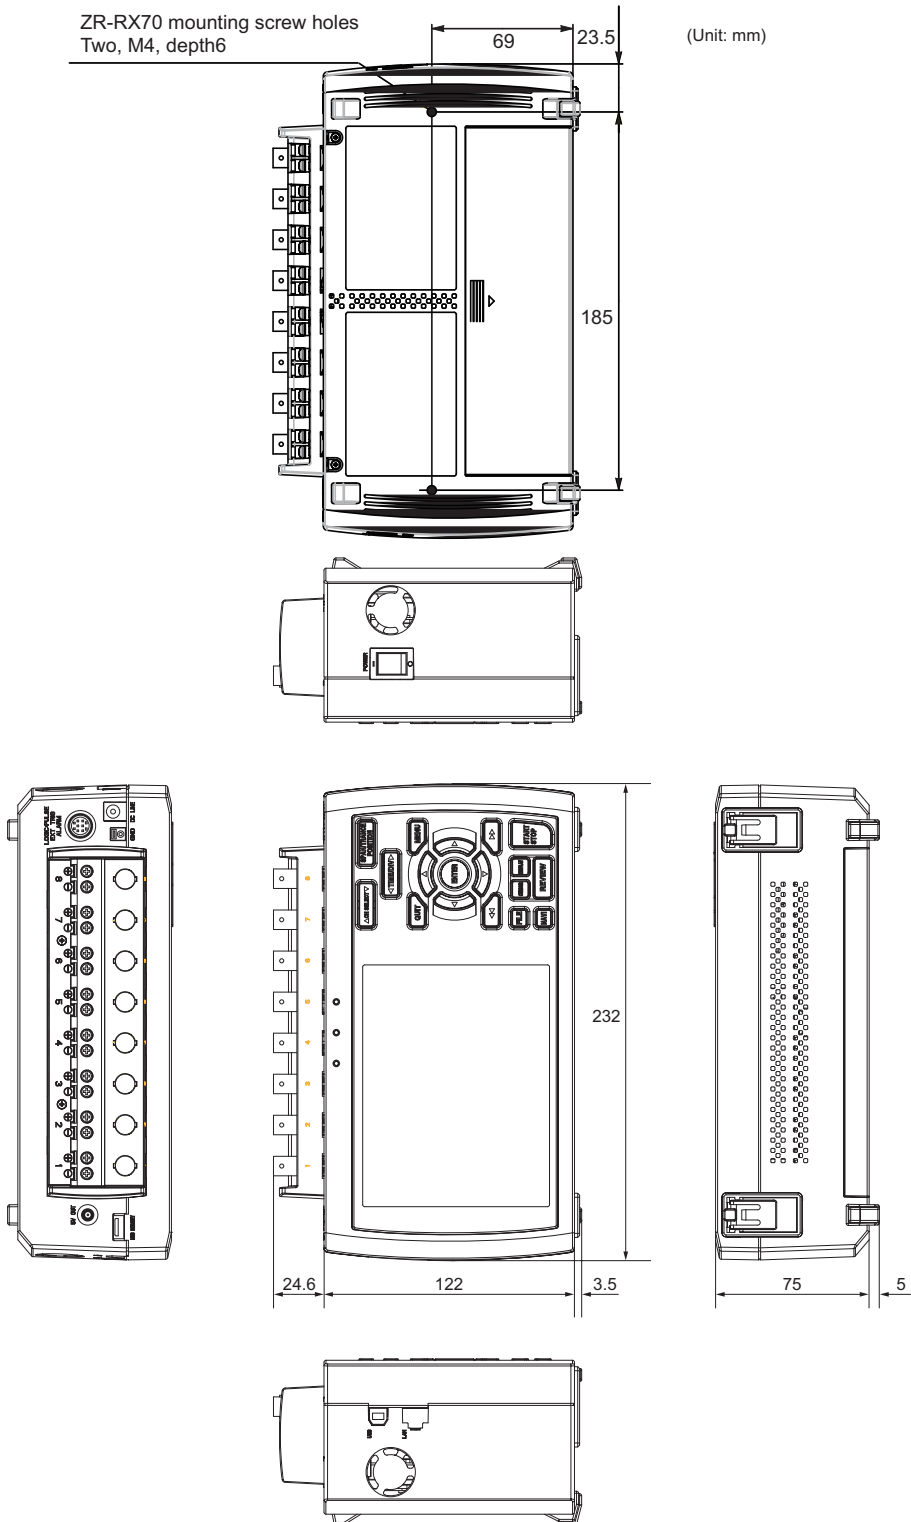

MEMO

# APPENDIX

---

<b>Error Messages and Countermeasures</b>	<b>118</b>
<b>Index</b>	<b>121</b>
<b>Revision History</b>	<b>122</b>

# Error Messages and Countermeasures

## List of Error Messages

This section outlines the error messages that are displayed and the countermeasures for those messages.

Display	Details Cause	Countermeasure
Can't adjust zero voltage.	When the input voltage is over 0 point adjustable range,it is displayed.	Please adjust the input voltage within 10% of $\pm$ of a set range.
Data was not captured.	When the logging file that is not recorded by as much as one point is replayed, it is displayed. The error occurs before detecting the trigger by the file that stops logging.	Please start the data logging.
The replay file name has not been specified.	When the replay is executed without selecting the file, it is displayed.	Please select the logging file.
The replay file name is the same as the save file name.p	When the logging file and the saved file are selected by the same name when it preserves between cursors,it is displayed.	Please change the file name.
EU function had set ON can't change range.	When the range is changed with scaling on, it is displayed.	Please turn off the scaling function, and change the range.
The recovery could not be done.	When the power supply is turned off while data is being written in a built-in memory, the recovery processing is done. However when failing in the recovery processing, it is displayed.	The recording data cannot be replayed. Please do not turn off power while logging data.
Upper < Lower setting	When the upper and the lower are opposite in the span setting, it is displayed.	Please change to upper < lower.
Too narrow span setting	When the span setting width of voltage CH is set by less than 1% of full-scale, it is displayed.	Please change the span setting value to 1% or more of full-scale.
Too narrow span setting	When the span setting width of temperature CH is less than 50 $\text{^\circ}$ C, it is displayed.	Please change the span setting value to 50 $\text{^\circ}$ C or more.
The load file name has not been specified.	When the setting file is loaded when it unselects the file, it is displayed.	Please select the setting file.
Out of input range.	When input value is over range,it is displayed.	Please change within the range of can the displayed setting.
Invalid trigger start settings. Press [Enter] key and change the settings.	When logging is started with the trigger setting not normally set,it is displayed.(START)	Please set the start trigger correctly.
Invalid trigger stop settings. Press [Enter] key and change the settings.	When logging is started with the trigger setting not normally set,it is displayed.(STOP)	Please set the stop trigger correctly.
Unable to establish a connection.	In connected test in the network time setting,when not connected with the network server,it is displayed.	Please check the network setting and the synchronous server setting of ZR-RX.

# List of File Error Messages

This section outlines the file error messages that are displayed and the countermeasures for those messages.

Display	Details Cause	Countermeasure
Disk I/O Error.(2)	File or directory is not found.	Set a correct file or directory.
Disk I/O Error.(9)	Invalid file format.	Filesystemn is invalid, and format it again, please. If the error is not canceled even if it formats it, might the media failure. Repair ZR-RX when a built-in memory is failure. Please use another USB memory when the USB memory is failure.
Disk I/O Error.(13)	It is displayed by either of following cause. <ul style="list-style-type: none"> <li>• Not formatted.</li> <li>• Write-protected.</li> <li>• Memory failure.</li> </ul>	<ul style="list-style-type: none"> <li>• Please confirm whether write-protection is turning on. (For the USB memory with the write-protection function. )</li> <li>• Please format it.</li> </ul> <p>If the error is not canceled even if it formats it, might the media failure. Repair ZR-RX when a built-in memory is failure. Please use another USB memory when the USB memory is failure.</p>
Disk I/O Error.(28)	It is displayed by either of following cause. <ul style="list-style-type: none"> <li>• Disk is full.</li> <li>• Neither the file nor the directory are created any further.</li> </ul>	"Disk is full" is usually displayed. Please increase the capacity of the disk as it erases an unnecessary file.

MEMO

# Index

<b>A</b>		<b>F</b>	
AC Power Supply, Connecting	21	FAST FORWARD key	48
Alarm		Features	17
Hold Generated Alarm	73	File Box	85
Operations	74	File Format	67, 81
Setting	72	FILE key	52
ALARM CLEAR	51	FILE Menu	80
AMP settings	57	Filter	60, 62
Analog Input		Free Running	54
Measurement Accuracy	110		
Annotation	61	<b>G</b>	
<b>B</b>		Game	79
Battery		Ground	
Charging the Battery	33	Connecting	21
Mounting the Battery Pack	32	<b>H</b>	
Battery Pack	114	Humidity Sensor	114
Bitmap Save	82	<b>I</b>	
<b>C</b>		Information	79
Capturing		Input	58, 62
Capturing	55	Internal flash memory	65
Data Capture Destination	65	Internal RAM	65
Data capture file name	63	Interval	
Repeated Capturing	71	Repeat Interval	71
CH SELECT key	44	Sampling Interval	64
Changing the Display Language	78	<b>K</b>	
Configuration When in Use	18	KEY LOCK	48
CURSOR key	51	Canceling Key Lock	
<b>D</b>		with Password	94
Data Replay Menu	89	<b>L</b>	
Data Save	81	LAN Connection	31
DATA Settings	63	Language	78
Date/Time	78	LCD Brightness	77
Setting the Date and Time	37	Level Operations	73
DC Power Supply, Connecting	23	Logic	61
Default Settings	78	<b>M</b>	
Demo Waveform Mode	78	Main Functions	111
Department name	76	MENU key	46
Direction key	47	Misc.	57
Display		Mode	54, 73
Language	38	Monitor	45
DISPLAY key	50		
<b>E</b>			
Edge Operations	73		
ENTER key	48		
EU (Scaling)	60, 62		

**N**

Name Type	66, 81, 82
NAVI key	52
NAVI Menu	93
Network Time Settings	79
Noise Countermeasures	36

**O**

Operating Environment	18
OPT Settings	75
OTHR Settings	77
Overview	16

**P**

Part Names and Functions	20
PC Software	113
POSITION	45
Power On Start	78
Precautions to Observe When Performing Measurement	35
Pulse	61

**Q**

Quick settings	93
QUIT key	47

**R**

Range	59
Rechargeable Battery How to Recharge the Rechargeable Battery	37
Replaying	56
REVIEW key	49
Room Temp Compensation	78

**S**

Screen Saver	77
Setting conditions Change Conds	76
Load setting	83
Save setting	83
Signal Types	24
SPAN	45
Span setting	45, 61
SPAN/TRACE/POSITION key	45
Standad Specifications	108, 118, 119
Start Side Source Settings	70
Start/Stop Confirmation Message	78
START/STOP key	48
Statistical Calculation Settings	68
Stop Side Source Setting	71

**T**

TCP-IP Settings	76
Temp Unit	78
Terminal Configuration	24
Text Input	88
TIME/DIV key	46
Timer Mode	70
TRACE	45
TRIG Settings	69
Trigger Trigger Level Settings	72
Trigger Operations	74

**U**

Unit	60, 62
Select	60, 62
USB Cable Connection Using a USB Cable	30
USB Drive Mode	49
USB memory	65
USB Setting	75
USER Settings	76

**W**

Warming-up	18
Window names and functions	40



MEMO

# Revision History

A manual revision code appears as a suffix to the catalog number at the bottom of the front and back covers of this manual.

Cat. No. Z283-E1-03

↑  
Revision code

Revision code	Date	Revised contents
01	February 2009	Original production
02	October 2009	Function addition according to software upgrade (Ver 2.03)
03	December 2013	Page 2 and 3: Replaced "Warranty and Application Considerations" with "Terms and Conditions Agreement." Page 24: Added information to <i>Terminal Configuration and Signal Types</i> .



**OMRON Corporation Industrial Automation Company**  
Tokyo, JAPAN

Contact: [www.ia.omron.com](http://www.ia.omron.com)

**Regional Headquarters**

**OMRON EUROPE B.V.**

**Sensor Business Unit**

Carl-Benz-Str. 4, D-71154 Nufringen, Germany  
Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

**OMRON ELECTRONICS LLC**

One Commerce Drive Schaumburg,  
IL 60173-5302 U.S.A.

Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

**OMRON ASIA PACIFIC PTE. LTD.**

No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967

Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:**

© OMRON Corporation 2009 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

**Cat. No. Z283-E1-03**

1213